 


OWNER'S MANUAL

READ AND UNDERSTAND THIS ENTIRE MANUAL BEFORE USING!

ZPV119 FIRE TRUCK

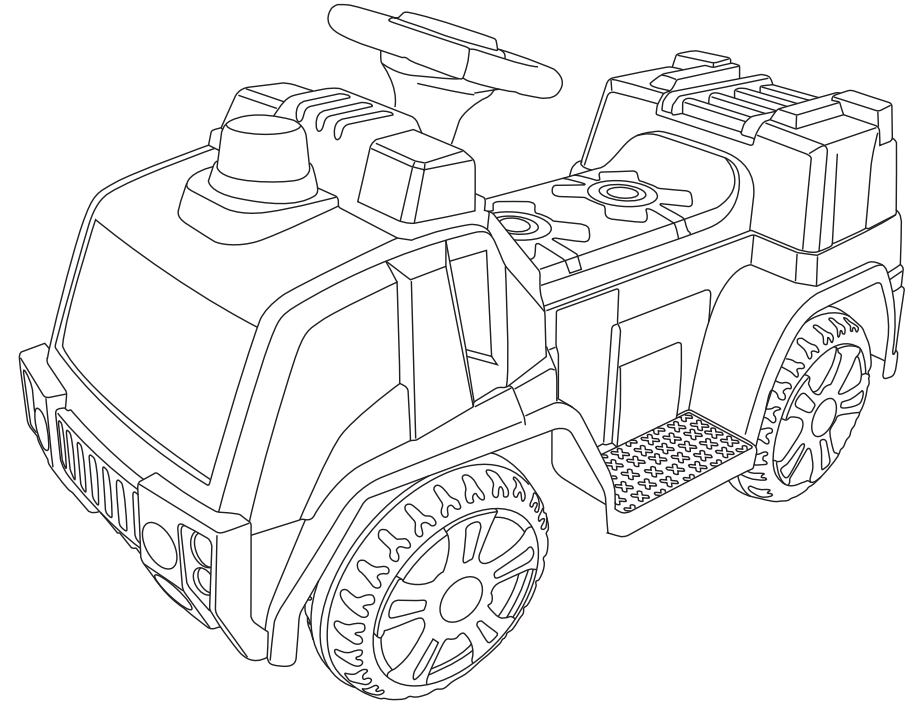

SUITABLE FOR 3 YEARS+
MAXIMUM USER WEIGHT: 20KG
ADULT ASSEMBLY AND
SUPERVISION REQUIRED

BOX CONTENTS:
TOY FIRE TRUCK WITH BATTERY
DECAL
CHARGER
SPANNER
OWNER'S MANUAL

**BEFORE FIRST TIME USE, CHARGE THE
BATTERY FOR AT LEAST 8-12 HOURS.**

**PLEASE KEEP THIS MANUAL FOR FUTURE REFERENCE AS IT CONTAINS
IMPORTANT INFORMATION.**

DIRECTORY

- (A)** BEFORE USE
- (B)** SPECIFICATION
- (C)** PRECAUTIONS
- (D)** EXPLODED DIAGRAM
- (E)** PARTS
- (F)** ASSEMBLY DIAGRAM
- (G)** USE INFORMATION
- (H)** FUSE
- (I)** CHARGING AND BATTERY SAFETY
- (J)** CARE AND MAINTENANCE
- (K)** TROUBLESHOOTING GUIDE

(A) BEFORE USE

Please read carefully before using our product manual, which tells you the detailed installation and correct use, Then can avoid damage and injury caused by improper operation . Particularly important is that it tells you a lot about safety precautions, Please memorize these and guide your child with patience. Please place the instructions in easily accessible place for future reference.

(B) SPECIFICATION

External dimensions	88*42*52cm	Power Mode	Rechargeable
User's proper age	suitable for children around 3-8years old	Charging Spec	6V 500mA
Loading limitation	20 KGS	Charging Time	8-12 hours
Speed	3 km/hr	Power life	280 times charging
Battery Spec	6V, 4.5AH	Fuse Spec	Self-resetting fuse

(C) PRECAUTIONS

WARNING:

ADULT ASSEMBLY REQUIRED.

Read entire instructions carefully before assembling this product.
To avoid injury to small parts children under 3 years old prohibited.

WARNING: ASSEMBLY

- Keep these instructions for future reference.
- Prior to assembly, this package contains small parts: hardware which is a choking hazard and may contain sharp edges and sharp points. Keep product away from children until assembled.
- Ensure working area is free of danger, always dispose packaging material in such a way that it may not cause any harm.
Plastic bags can be dangerous. To avoid suffocation keep plastic bags away from babies and children.
- To prevent serious injury, children must not use the equipment until completely assembled.
- Spare parts exchange should be operated by an adult, because the battery is very heavy and the internal acidic electrolyte, if any leakage should avoid touch the liquid, and need a professional disposition. If accidental with the electrolyte, it is timely at least 15 minutes rinse with cold water and seek medical treatment.

 
IMPORTANT - MUST READ CAREFULLY

WARNING: USE

TO AVOID SERIOUS INJURY: Continuous adult supervision is required while this vehicle is in operation.






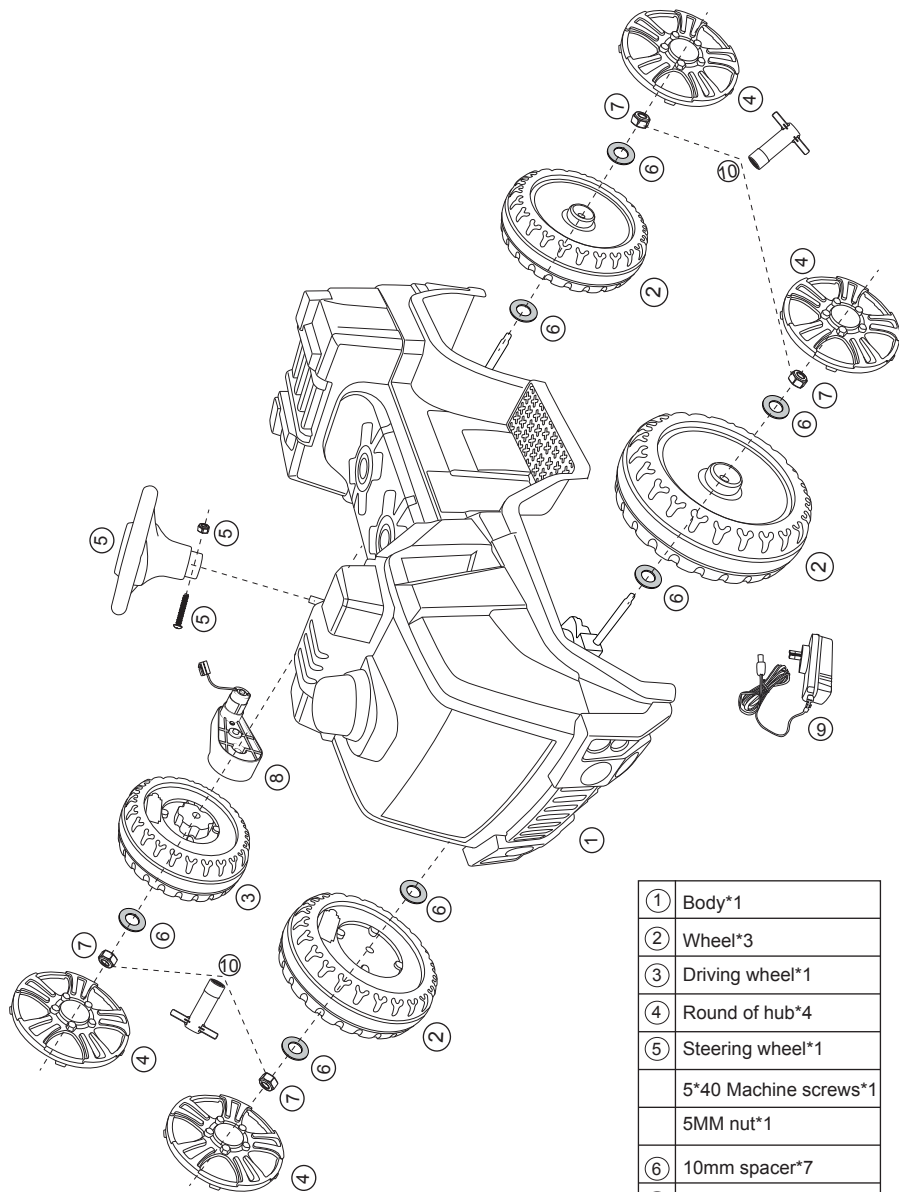





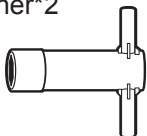
- To reduce the risk of injury, adult supervision is required. DO NOT leave the child play vehicle alone to avoid accidents.
- NEVER use in or near roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water and dangerous place, always wear shoes, and NEVER allow more than 1 rider.
- NEVER allow children to ride at night.
- Instruct children on proper use of this product and to sit properly when driving. DO NOT RIDE VEHICLE STANDING UP.
- It is recommended that the rider always wears safety equipment such as fitted helmet when riding the vehicle.
- Ride-on toys should be used with caution since skill is required to avoid falls or collisions which may cause injury to the user.
- The vehicle is intended for use on flat, level surfaces.
- DO NOT ride the vehicle indoors. It is intended for outside use ONLY. Interior floors can be damaged by riding the vehicle indoors.
- DO NOT tow objects behind the vehicle or overload the vehicle as doing so will cause damage.

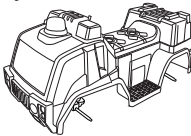(D) EXPLODED DIAGRAM






①	Body*1
②	Wheel*3
③	Driving wheel*1
④	Round of hub*4
⑤	Steering wheel*1
	5*40 Machine screws*1
	5MM nut*1
⑥	10mm spacer*7
⑦	8 MM Nut*4
⑧	Motor*1
⑨	Charger*1
⑩	Spanner*2

(E) PARTS

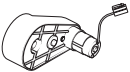
<p>Body*1</p>  <p>①</p>	<p>Wheel*3</p>  <p>②</p>	<p>Driving wheel*1</p>  <p>③</p>
<p>Round of hub*4</p>  <p>④</p>	<p>Steering wheel*1</p>  <p>5*40 Machine screws*1</p>  <p>5MM nut*1</p>  <p>⑤</p>	
<p>10mm spacer*7</p>  <p>⑥</p>	<p>8 MM Nut*4</p>  <p>⑦</p>	<p>Motor*1</p>  <p>⑧</p>
<p>Charger*1</p>  <p>⑨</p>	<p>Spanner*2</p>  <p>⑩</p>	

   (F) ASSEMBLY DIAGRAM

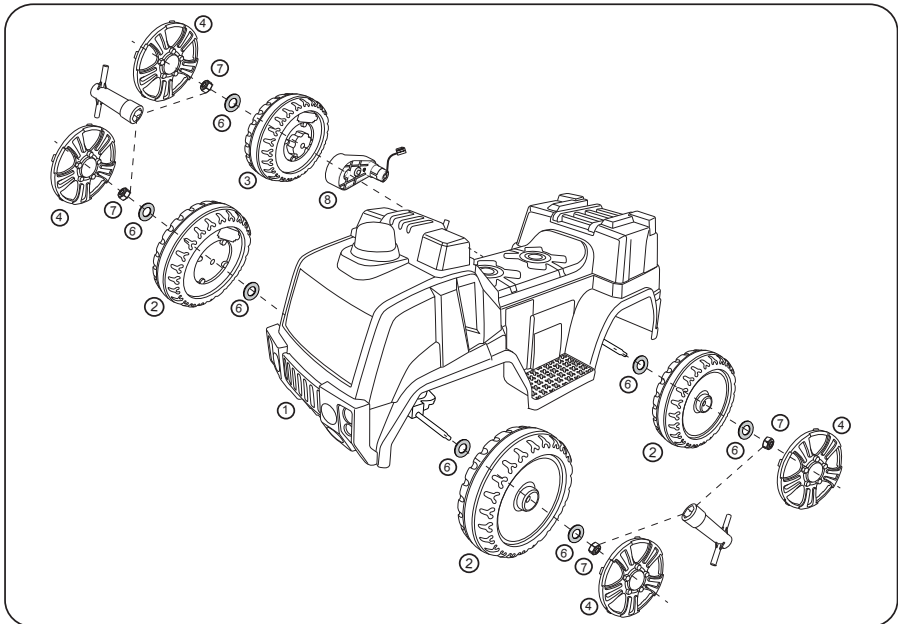


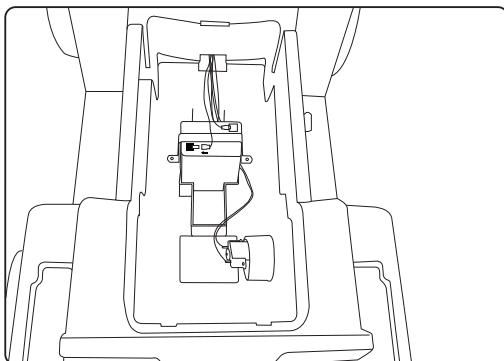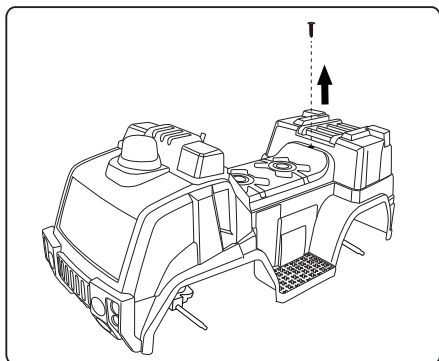

 Before using it for the first time, lift up the seat then open the seat plate, unscrew the screws and connect the main wire to the battery wire (with RED to RED) any wrong connection may cause short circuit or other faults.

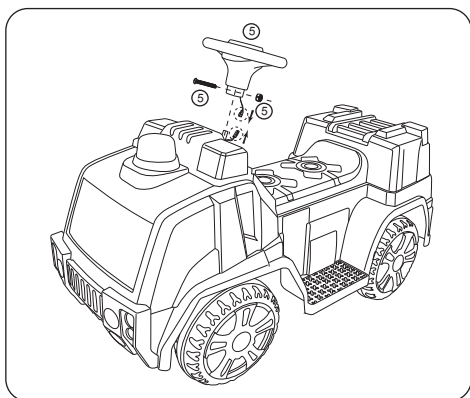

Fire ladder can be up and down.

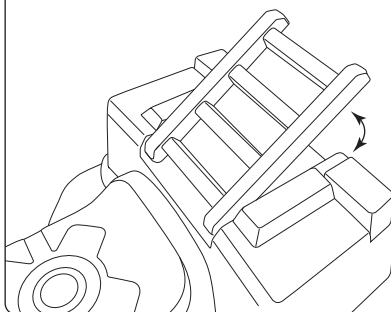 

Attention: Before assembling the steering wheel, connect the plug on the steering wheel with the plug on the car body.

 
 
(G) USE INFORMATION

NOTE:

- (1) The car has the music function.
- (2) Charge the battery if the vehicle runs slower than normal.
Recharge the battery for 8-12hours after each use, DO NOT exceed 15hours.
- (3) It is normal that the power charger and the battery become warmer while on charging
- (4) TURN OFF the power switch always when you're not using vehicle

FUNCTION:

- (1) START: Press POWER switch(see below diagram) and step on the PEDAL switch (see below diagram)
- (2) FORWARD/BACKWARD function: Press FORWARD switch and step on the PEDAL switch, the vehicle will go forward; Press BACKWARD switch and step on the PEDAL switch, the vehicle will go back
- (3) SOUND/LAMP function: Press switch(as below diagram)

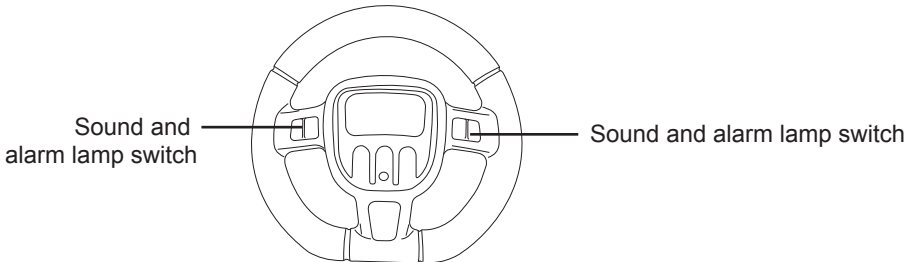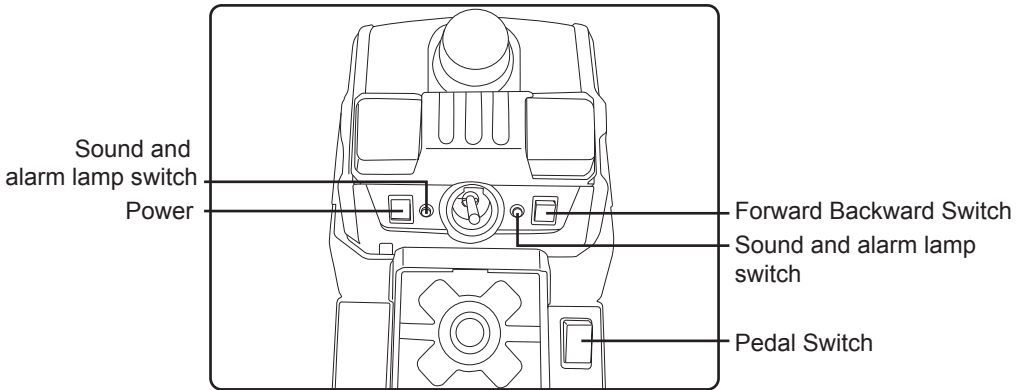

(H) FUSE

The vehicle use self-tapping fuse.

 
When overloading or improper use, the fuse will be automatically cut off in 10-20 seconds and then will automatically connect the power.

To avoid the cutting off, please pay attention:

- (1) The maximum weight limited of the motorcycle is 20KG.
- (2) Not stall the car running or heavy trailer behind.
- (3) Do not liquid immersion, it may cause the short circuit.
- (4) Do not revise the vehicle's circuit or the structure.
- (5) Do not use the different specification fuse.

(I) CHARGING AND BATTERY SAFETY

As shown in below diagram, put the charger into the vehicle's charging hole, and the power plug into the matched stable AC power

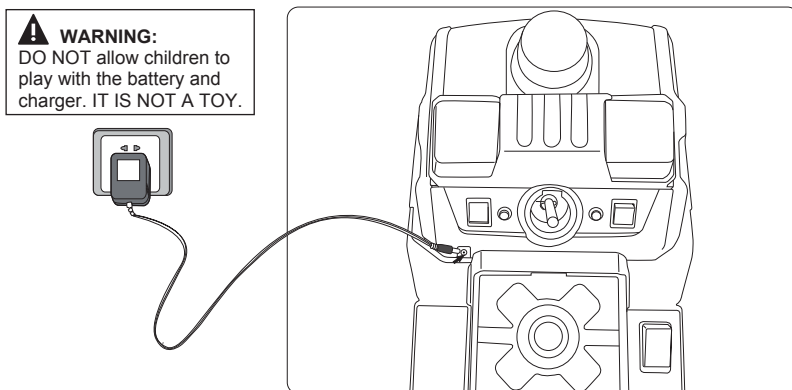

NOTE:

- (1) To assure the safety, battery charging and replaced only done by an adult.
- (2) Insert battery with the correct polarity (+ and -).
- (3) First using, fully charge at least 10 hours, normal recharging 8~10 hours after every using, but NEVER charge over 15 hours.
- (4) CHECK the charger, battery and plug before every charging, DO NOT use if it is broken.
DO NOT upside down the battery when charging.
- (5) DO NOT open or decompose the battery and charger, ONLY USE the type battery and charger recommended for the unit.
- (6) DO NOT short-circuit battery.
- (7) DO NOT recharge non-rechargeable battery.
- (8) DO NOT mix old and new or different type of batteries.
- (9) DO NOT dispose of battery in fire as it may leak or explode.
- (10) Exhausted battery is to be removed from the toy.
- (11) When vehicle is not used for an extended time, remove battery to prevent possible leakage and damage to the unit.
Charge the battery once per three months to extend the lifetime of the battery.

(J) CARE AND MAINTENANCE

- (1) Adults should check regularly such as wires, plugs, electrical, housing, steering systems, fastening is normal or not, once every two weeks suggested. If there is any problem, STOP use until the fully restored.
- (2) Clean vehicles with soft and dry cloth, can not use water or fuel cleaning that will lead to corrosion switch and caused switch failure.
DO NOT wash with soapy water or spray vehicle with a hose.
DO NOT wipe vehicle with car wax or other was-based polish.
- (3) DO NOT drive vehicle during wet or snowy weather as moisture can cause corrosion in the motor or electrical switches.
DO NOT drive vehicle on gravel or sand as doing so may cause motor to jam.
- (4) Store vehicle indoors or cover with a protective tarp during inclement weather.
DO NOT store the vehicle in the high-temperature places or near the fire, or in moist places.
- (5) When vehicle is not used on a regular basis, please pull out the battery, the switch must be "off" position to ensure circuit safety. Charge the battery once per three months to extend the lifetime of the battery.
- (6) DO NOT make modifications to this vehicle.
When maintenance, do not revise the vehicle's circuit and structure.
- (7) ONLY use the battery charger which comes with this vehicle. Not doing so may cause irreparable damage, including fire or explosion which may result in injury to the user.
- (8) In the unstable supply voltage region, we recommended to instal voltage stabilizer to protext the battery.

(K) TROUBLESHOOTING GUIDE

Problem	Possible Solutions
The vehicle does not move	<ul style="list-style-type: none"> · Charge the battery. (Charge battery after each use.) NOTE: vehicle will be cut off electricity during charging. · Check all electrical connections. · Check all switch whether "on" position. · Check foot switch or manual button is stuck down so that can not press. · The fuse may have been activated due to excessive weight or weight or rough driving conditions. Wait at least 10~20 seconds, and the vehicle will reset itself. · Check is whether there is debris stuck wheels.
The vehicle begins to run slow	<ul style="list-style-type: none"> · Charge the battery. (Charge battery after each use.) · Only allow one rider at a time. DO NOT exceed child weight limit: 20kg · Drive on level ground. · Battery may be old or not accepting a full charge. The battery will last from 1 to 3 years depending on care, use and environment. Replace with 6Volt 4.5 Ah battery only. · Check is whether there is debris stuck wheels.
The vehicle runs erratically	<ul style="list-style-type: none"> · There may be a problem with the fuse, or you may have a damaged battery.
The charger feels warm when in use	<ul style="list-style-type: none"> · This is normal.
The gears sound very loud and/or are making a grinding noise.	<ul style="list-style-type: none"> · The gears may be broken.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Where a failure does not amount to a major failure, we are entitled to choose between providing you with a repair, replacement or refund. To obtain compensation, you would need to provide documentary evidence of the loss or damage suffered, and documentary evidence that such loss or damage was a reasonably foreseeable consequence of a failure by us to comply with a consumer guarantee under the Australian Consumer Law. Such evidence may include photographs, statutory declarations, receipts or reports (e.g. from your doctor), depending on the loss or damage.

In addition to all rights and remedies to which you may be entitled under the Competition and Consumer Act 2010 (Commonwealth) and any other relevant legislation, the manufacturer warrants this product to be free from defects in materials or workmanship for a period as stated on the packaging from the date of purchase.

In order to claim under this warranty, you will need to bring the product to the store of purchase, along with proof of purchase (typically this will be a receipt). Any cost incurred by you in bringing the product to the service desk will be borne by you. We will then, at our option, either repair or replace the product, or refund your money and take back the product.

Our liability under this manufacturer's warranty is subject to us being satisfied that a defect was caused by defective workmanship or materials, and was not caused by or substantially contributed to by other factors, or circumstances beyond our control, including (but not limited to) defective installation, maintenance or repair, alteration or modification of the product in any manner not recommended by the manufacturer or any neglect, misuse or excessive use.

The benefits conferred by this manufacturer's warranty are in addition to all rights and remedies conveyed by the Competition and Consumer Act 2010 (Commonwealth), and any other statutory rights to which you may already be entitled, and this warranty does not exclude, restrict or modify any such rights or remedies that are implied by law.

HUNTER PRODUCTS

Level 2, 424 Warrigal Road Moorabbin 3189

Ph: 1800 224 094

Email: enquiries@hunterproducts.com.au

Our products are suitable for the following standard:

- GB6675,GB19865
- ASTM-F963,CPSIA
- EN71 AND EN62115