 


INSTRUCTION MANUAL

Spider-Man 6 volt Motorbike

Item No.: HUN8091
Model No.: ZP3999B

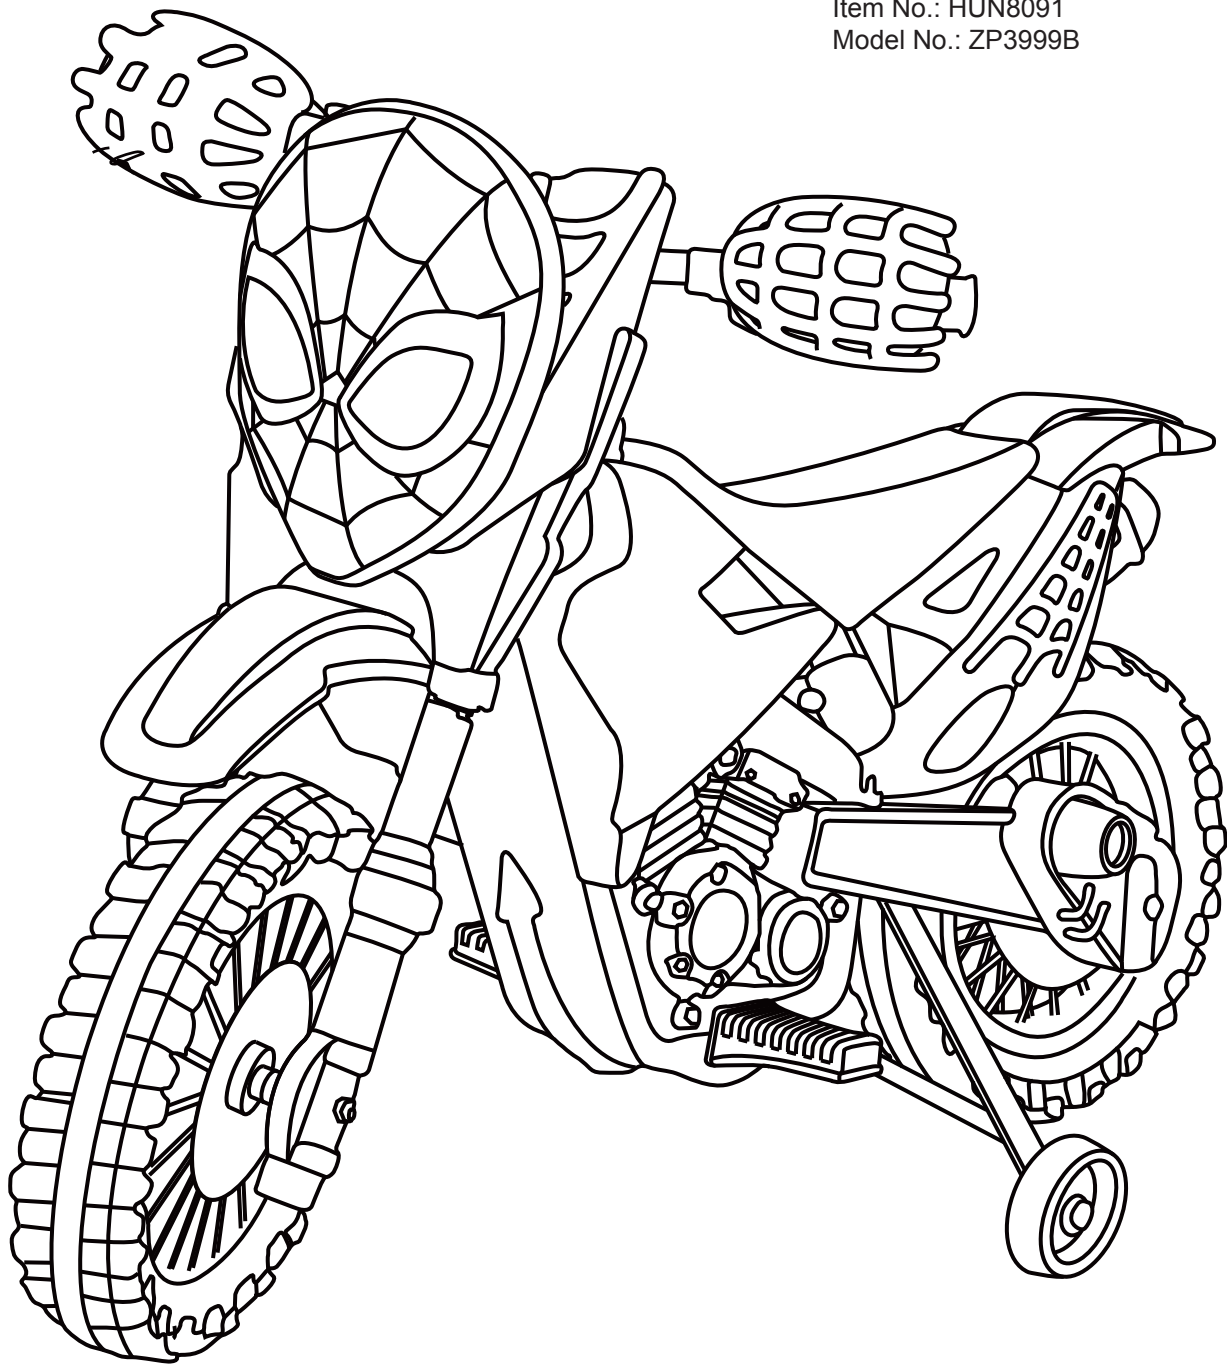

Styles and colours may vary.



Hunter
Products

For after sales service, replacement parts or
general enquiries please contact:

Web: www.electricrideon.com.au

Toll Free Service Phone: 1800 224 094

Email: enquiries@hunterproducts.com.au

SUITABLE FOR AGES 3 YEARS +
MAXIMUM USER WEIGHT 25KG
ONLY 1 RIDER AT A TIME
FORWARD GEAR ONLY

Contents

Before First Use:	2.
Product Specifications:	3.
Safety Precautions & Warnings:	4-7.
Parts List:	8-9.
Parts Diagram:	10.
Assembly Instructions:	11.
Important Information:	12.
Charging Instructions:	13 .
Reset Fuse:	14.
Maintenance:	15.
General Care:	16.
Troubleshooting:	17- 18.
Customer Service Information:	19.
Warranty:	20.

Before First Use: 2

This **Instruction Manual** contains important safety information as well as assembly, use and maintenance instructions. This bike must be assembled by an adult who has read and understands the instructions in this manual. Keep the packaging away from children and dispose of properly before use.

Keep this manual for future reference.

3 Product Specifications:

EXTERNAL DIMENSIONS	107x53x70 cm	POWER MODE	Rechargeable
AGES	suitable for children 3+ years	FUSE SPEC	5 amp Thermal Fuse
MAX WEIGHT LIMIT	25 kg	CHARGING TIME	8-12 hours.
SPEED	2.5-3 km/hr	CHARGING SPEC	8V 0.5A
BATTERY SPEC.	6V, 4.5AH		

For after sales service, replacement parts or general enquiries please contact:

Web: www.electricrideon.com.au

Toll Free Service Phone: 1800 224 094

Email: enquiries@hunterproducts.com.au

Safety Precautions & Warnings 4



WARNING!

The following safety hazards may result in serious injury or death to the user of the vehicle Spider-Man 6v Motorbike Ride-on:

- This product contains small parts that are for adult assembly only. Keep small children away when assembling. Remove and dispose of all protective material and poly bags before assembly. Be sure to remove all packaging materials and parts from underneath the car body.
- Riding the vehicle without a helmet. Riders must always wear a fitted helmet that complies with Australian Standard AS/NZS 2063:2008.
- Battery posts, terminals and related accessories contain lead and lead compounds (acid) chemicals that are toxic and corrosive. Never open the battery.
- Body parts such as hands, legs, hair and clothing can get caught in moving parts. Never place a body part near a moving part or wear loose clothing while using the vehicle. Always wear shoes when using the vehicle.
- Using the vehicle near streets, motor vehicles, drop-offs such as: steps, water (swimming pools) or other bodies of water, sloped surfaces, hills, wet areas, flammable vapors, in alleys, at night or in the dark could result in an unexpected accident.
- Always use the vehicle in a safe, secure environment with continuous adult supervision. Never leave the child unattended.
- Using the vehicle in unsafe conditions such as snow, rain, loose dirt, mud, sand or fine gravel may result in unexpected action such as tip over and skidding.
- Using the vehicle in an unsafe manner. Examples include but are not limited to:
 - Pulling the vehicle with another vehicle or similar device
 - Allowing more than one rider
 - Pushing the user from the back
 - Traveling at an unsafe speed
- Always use common sense and safe practices when using the vehicle. Different type of batteries or new and old batteries are not to be mixed.
- Not to be used in traffic
- This toy is unsuitable for children under 3 years due to its maximum speed.
- Battery charger, electric wire plug enclosure and other parts should be periodically check for damage, if have damage, need to repair before use.
- There are additional hazards of using the toy in areas other than private grounds.

5 Safety Precautions & Warnings

Age Range	3 to 7 years
Weight Range	No more than 25kg

Before using the vehicle the child should understand the vehicle controls and safety issues. They must also demonstrate the capability to handle the vehicle and operate its controls. It is the responsibility of the adult to educate the child and supervise use of the vehicle.

Read the following safety warnings to any child using the vehicle Ride-on:

WARNING!

 
PREVENT INJURIES AND DEATHS:

- **NEVER LEAVE CHILD UNATTENDED. ALWAYS** keep child in view when child is in vehicle. Direct adult supervision is **REQUIRED**.
- **NEVER** use in roadways, near cars, on or near steep inclines or steps, swimming pools or other bodies of water.
- **ALWAYS** wear shoes.
- **ALWAYS** sit on the seat.
- **RISK OF FIRE.** Do not bypass.
- **NEVER** allow more than one (1) rider in the vehicle Ride on.
- Adult assembly required.
- Only use the vehicle when an adult is present to watch (supervise).
- Always sit in the seat when using the vehicle.
- Keep your hands, hair and clothes away from moving parts.
- Always wear shoes when using the vehicle.
- Only one rider is allowed at a time on the vehicle Ride-on.
- Children under three years old cannot use the vehicle.
- Only drive on level ground.
- Do not go near water, drop-offs or up and down steep slopes.
- Do not drive the vehicle into loose dirt, mud, and or fine gravel.
- Do not drive the vehicle on streets or near cars.
- This toy contains batteries that are non-replaceable.
- **WARNING:** Not to be used in traffic, it has potential hazards of using the ride-on electric toy in areas other than private grounds.
- The charger is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

Safety Precautions & Warnings 6

WARNING!

The following safety hazards may result in serious injury or death to the user of the vehicle:

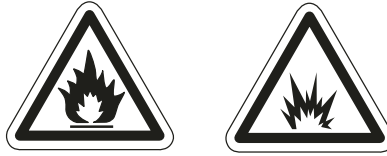

- Use of a battery or charger other than the supplied 6v rechargeable battery and charger may cause a fire or explosion. Only use the supplied 6v rechargeable battery and charger with the vehicle.
- Using the 6v rechargeable battery and charger for any other product may result in over heating, fire or explosion. Never use the 6v rechargeable battery and charger with another product.
- Explosive gases are created during charging. Charge the battery in a well ventilated area. Do not charge the battery near heat or flammable materials.
- Contact between the positive and negative terminals may result in fire or explosion. vehicle direct contact between the terminals. Picking up the battery by the wires or charger can cause damage to the battery and may result in a fire. Always pick up the battery by its case or handles.
- Liquids on the battery may cause fire or electric shock. Always keep all liquids away from the battery and keep the battery dry.



- Contact or exposure to battery leakage (lead acid) may cause serious injury. If contact or exposure occurs immediately call your physician. If the chemical is on the skin or in the eyes, flush with cool water for 15 minutes. If the chemical was swallowed, immediately give the person water or milk. Do not give water or milk if the patient is vomiting or has a decreased level of alertness. Do not induce vomiting.

7 Safety Precautions & Warnings



WARNING!

- Battery posts, terminals and related accessories contain lead and lead compounds (acid), chemicals and are toxic and corrosive. Never open the battery.



- Tampering or modifying the electric circuit system may cause a shock, fire or explosion and permanently damage the system. Exposed wiring, circuitry in the charger may cause electric shock. Always keep the charger housing closed.

Important! Before using the vehicle for the time the battery needs to be charged for a full twenty-four hours (no more than thirty hours). Only an adult who has read and understands the following safety warnings should handle, charge or recharge of the battery (see Maintenance).

 

 

 
 
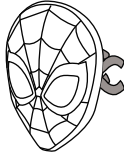 

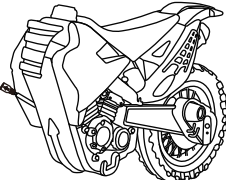 
 

 

 
Note: It is not necessary to remove the battery from the vehicle for charging. However, if the adapter cord will not safely reach a 240V wall outlet, the battery can be removed for charging.




 
 
 







WARNING!

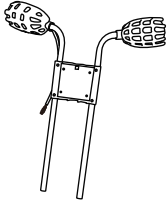- Non-rechargeable batteries are not to be recharged;
- Batteries are to be inserted with the correct polarity;
- Exhausted batteries are to be removed from the toy;
- The supply terminals are not to be short-circuited.
- Rechargeable batteries are only to be charged under adult supervision;

Parts List 8


PART NO	PART NAME	PICTURE	Qty (pcs)	REMARKS	PART NO	PART NAME	PICTURE	Qty (pcs)	REMARKS
1	Handle bar		1		2	Front fender		1	
3	Decorative front fork cover		2		4	Front wheel (no gear attachment)		1	
5	Front axle		1		6	Bushing		2	
7	Mask		1		8	Front panel		1	
9	Body		1		10	Pedal plate(1)		1	
11	Pedal plate(2)		1		12	Training wheel		1	
13	Dashboard		1		14	Dashboard cover		1	

 9 Parts List

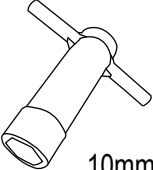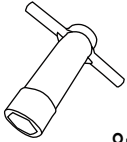  PART NO	PART NAME	PICTURE	Qty (pcs)	REMARKS	PART NO	PART NAME	PICTURE	Qty (pcs)	REMARKS
15	Screw M10*140mm		1		16	Nut 8mm		2	
17	Screw 4*12mm		4		18	Washer 8mm		2	
19	Bolt M5*25mm		2		20	Bolt M6*16mm		2	Already installed on the car
21	Washer 6mm		2	Already installed on the car	22	Charger		1	
23	Instruction manual		1		24	Included Tools:	 10mm×1  8mm×2		

Parts Diagram 10


1	Handle bar	6	Bushing	11	Pedal plate(2)	16	Nut 8mm
2	Front fender	7	Mask	12	Training wheel	17	Screw 4*12mm
3	Decorative front fork cover	8	Front panel	13	Dashboard	18	Washer 8mm
4	Front wheel (no gear attachment)	9	Body	14	Dashboard cover	19	Bolt M5*25mm
5	Front axle	10	Pedal plate(1)	15	Screw M10*140mm	20	Nut 5mm
						21	Washer 6mm

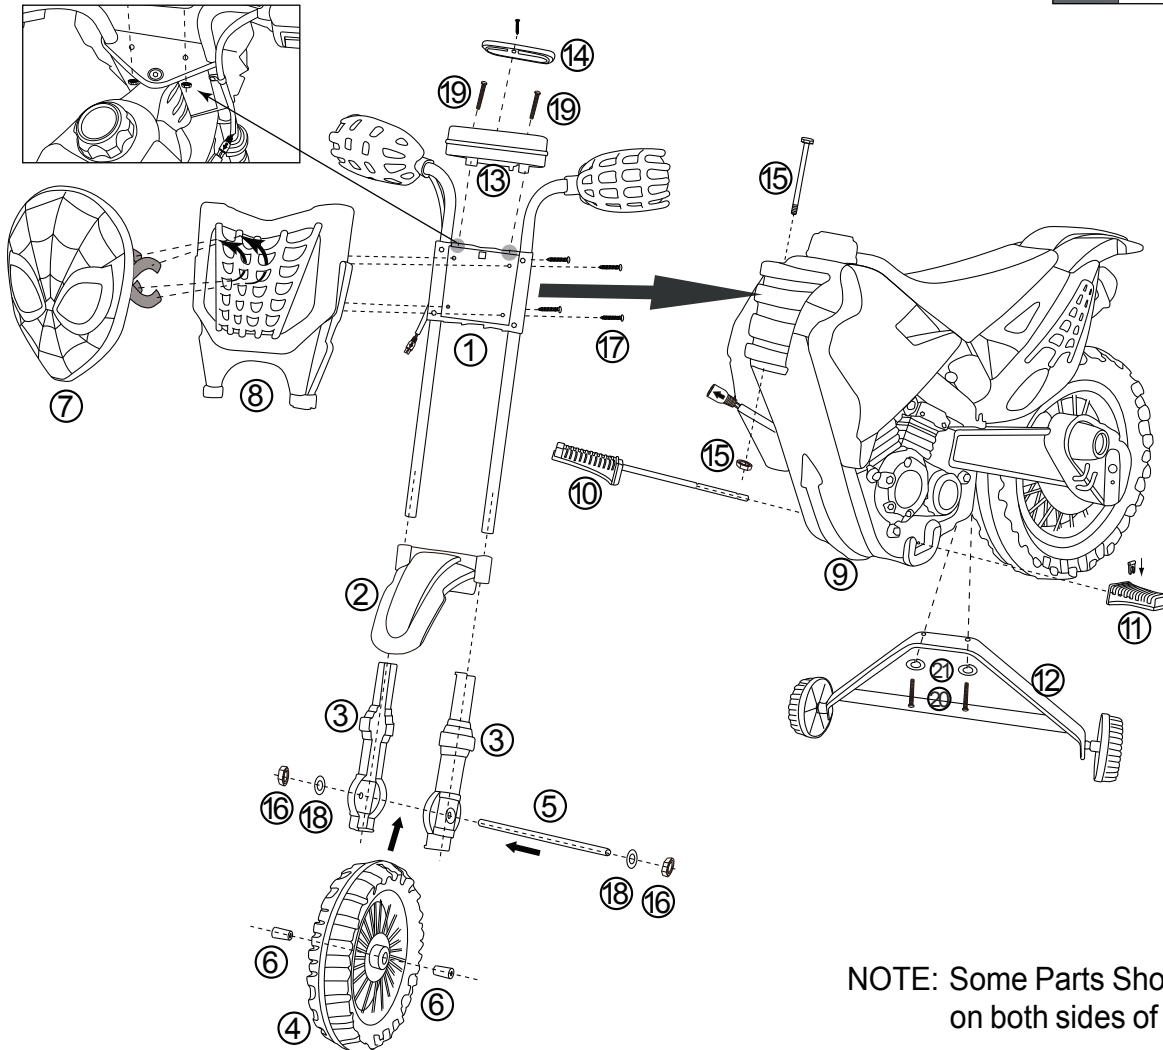 

Tools Required



 Screwdriver(not included)

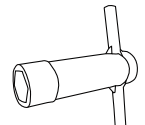


Spanner

NOTE: Some Parts Shown are assembled on both sides of vehicle

11 Assembly Instructions

 BIKE ASSEMBLY:

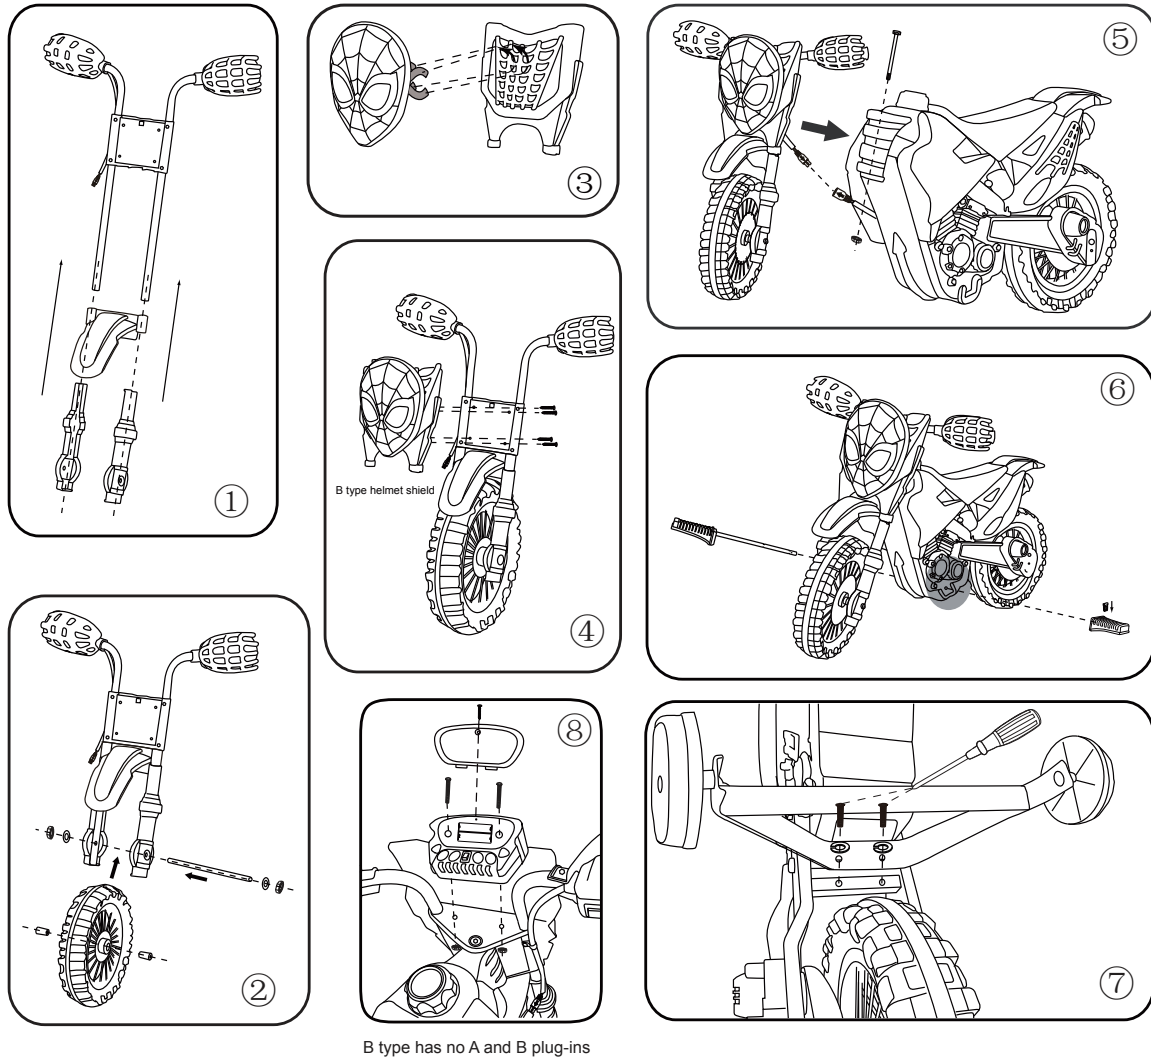

STEPS:

Step 1: Install handle bar over front fender and into front fork covers in the same order as diagram 1.

Step 2: Install the front wheel with axle rod and nuts, pay attention to diagram 2 for order of parts assembly.

Step 3: Loop the supplied tape through rear of mask and into webbing on the plastic handlebar plate to fix the mask in place

Step 4: Fit part # 8 handlebar plate to front of bike using 4 x screws.

Step 5: Connect the plugs on handle bar with main body of the bike. Attach front wheel & handlebar assembly to the main body of the bike using part # 15 - M10x140 Bolt & Nut.

Step 6: Slide the foot pedal axle rod through bike and fit plastic foot plates either side of the bike.

Step 7: Fit the training wheel assembly over the 2 bolts underneath the bike as per diagram 7. Fix and tighten in place using M5 nuts.

Step 8: Fit dashboard onto the handlebar face plate and fix in place using M5 x 25 screws. Clip wind-shield into place once dashboard is fitted.

Important Information 12

1: Before using the bike for the first time locate the plugs on the right hand side of the handlebars as per image 1 below. Ensure these plugs are connected together.

2: Charging Information.

 
Refer to image 2 below. Round charge port located on right side of bike is indicated with an arrow.

3: Add the Batteries (NOT PROVIDED) of dashboard

- a. With a screwdriver remove the screw on the dashboard cover located in the center of the steering wheel.
- b. Remove the dashboard cover from the top of the battery compartment.
- c. Insert two AA batteries in their correct polarities.
- d. Place the dashboard cover over the battery compartment and fasten with the screw you removed in step one.

4: Operating Instructions.

Start/Go switch is located on right hand handle. To operate press this button. To stop release the button.

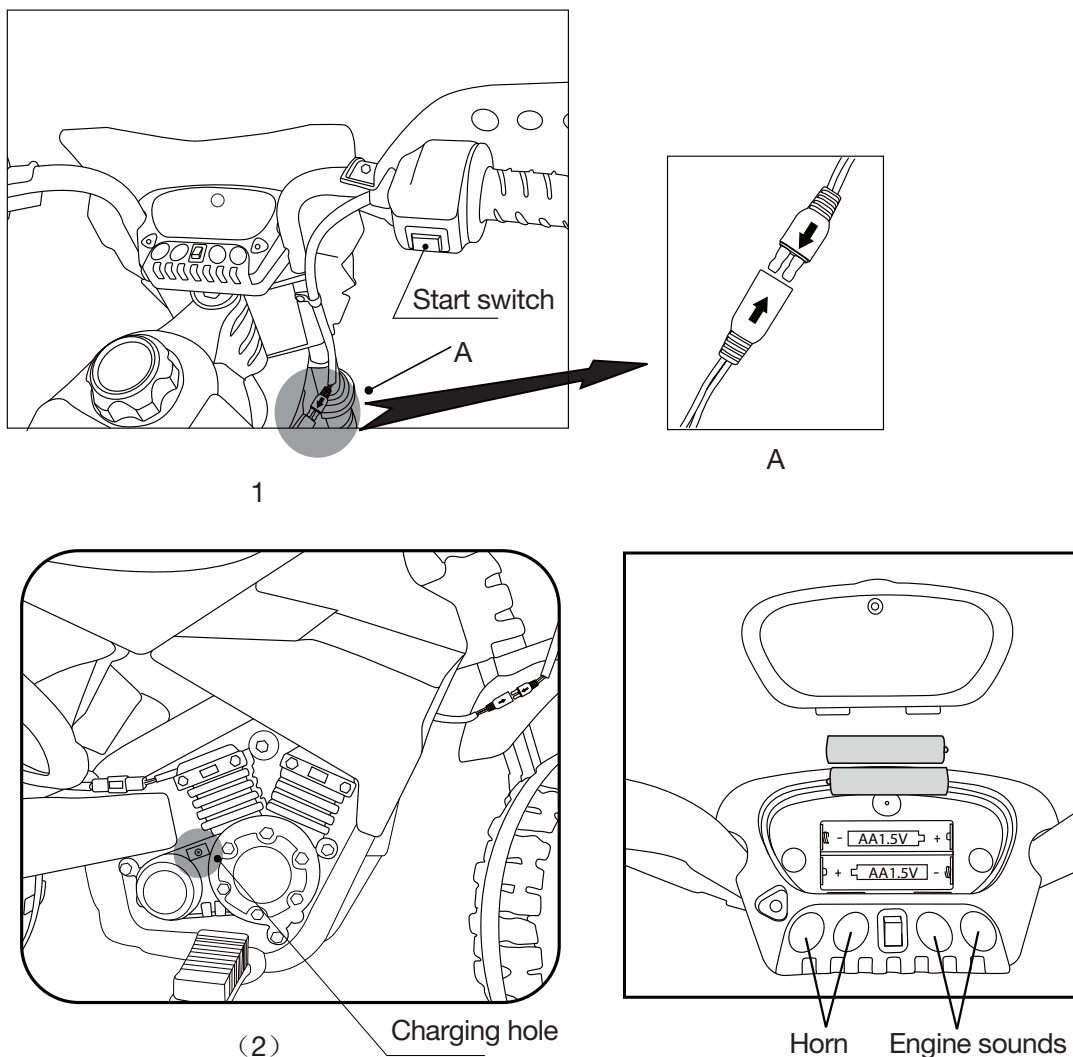

13 Charging Instructions

 
To Charge the Battery:

- 1: Ensure the bike is stopped and turned off.
- 2: Plug the round charge pin into the charge port on the right side of the bike. As per image below.
- 3: Plug transformer into a 240 V outlet.

NOTE: First time charge should be for 10-14 hours

Subsequent charges should be 8-10 hours.

Do not charge for more than 15 hours.

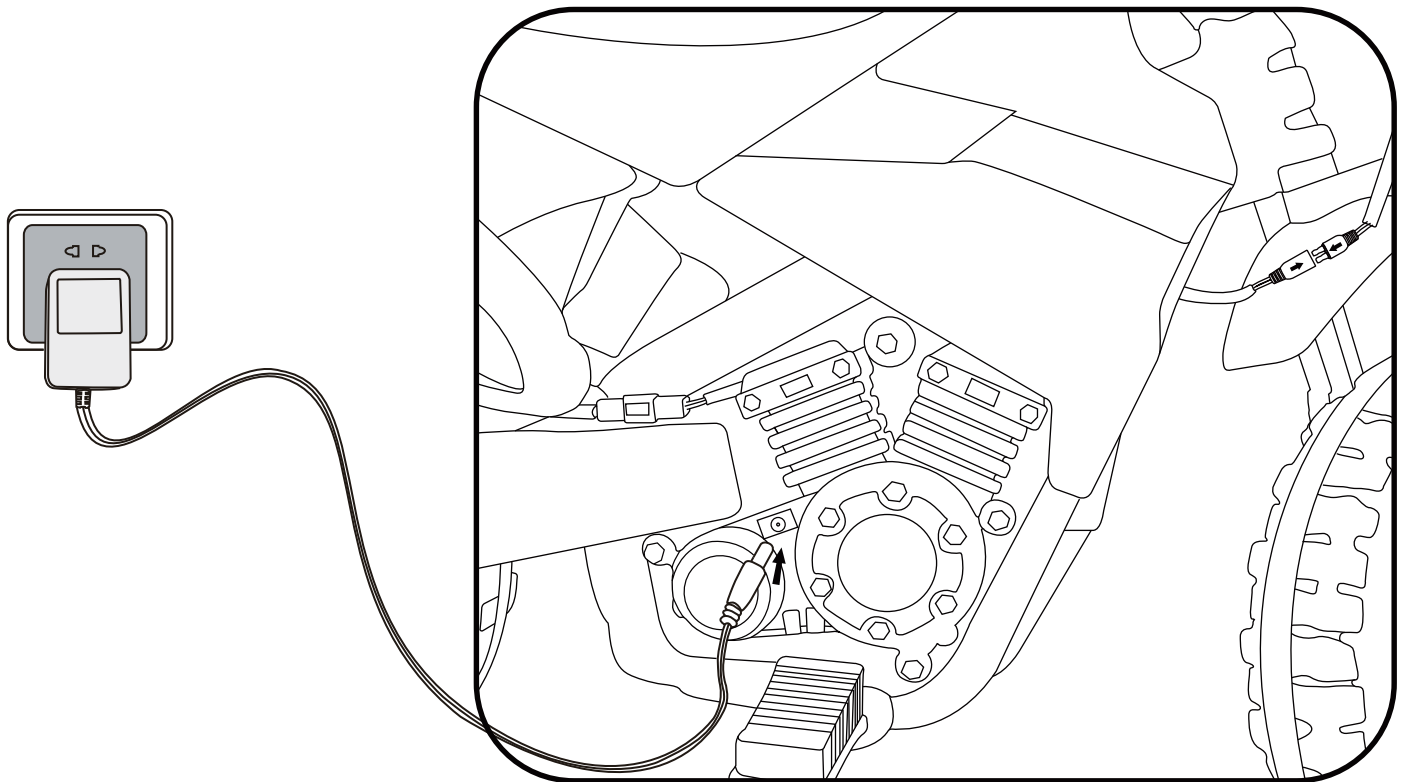

IMPORTANT!

Always stop vehicle when changing the speed or direction to avoid damage the gear box and motor.

Important Note

**The vehicle will not work while connected to the charger.
Disconnect the charger from the car before trying to operate.**

Thermal Overload Fuse:

This bike is fitted with a thermal overload fuse. If the bike is overloaded the fuse will cut off power to the bike for 10-20 seconds before resetting itself.

To avoid the fuse activating please follow the below guidelines.

- 1: Maximum user weight is 25kg
- 2: Do not tow or overload bike with weight.
- 3: Do not get the bike or its electric components wet.
- 4: Do not alter the bikes circuitry or construction.

15 Maintenance

Important Battery and Charger Information

- Only an adult who has read and understands the safety warnings may handle and operate the battery and battery charger. Keep away from children.
- Charge the battery for 10-14 hours before using the vehicle for the first time.
- Charge the battery immediately after each use. Charge for at least 8-12 hours, but no more than 15 hours.
- Charge the battery at least once a month, even if the vehicle is not used or stored.
- Never leave the battery in a discharged condition.
- Connect the terminal of the battery and charger, then plug the charger into a 240V AC outlet.
- It is normal for the charger to heat slightly. If the charger rises above 71°C / 160°F, disconnect the charger and call Customer Service for assistance.
- Keep the charger away from water or excessive moisture to prevent short-circuiting.
- Only use the charger specified with the original item. **Do not charge the battery with any other charger.**
- Do not attempt to recharge non-rechargeable batteries with the original charger.
- **Do not replace the battery with any other battery, or the warranty will be voided.**
- Remove damaged batteries from the car immediately. Recycle or dispose of the used batteries responsibly.
- Do not short circuit the supply terminals.
- Do not leave the battery connected in the vehicle for extended periods of time when the vehicle is not being used. Disconnect the battery connector from the engine connector before storing.
- The vehicle is equipped with a thermal fuse to protect the electric circuit. If the vehicle cuts out, turn the vehicle off and on to reset.

General Care 16

- Regularly inspect all vehicle parts to ensure they are in good working condition.
- Regularly inspect the charger, cord, plug, and other related parts for damage.
- Remove any damaged parts and immediately contact Customer Service for replacement parts.
- DO NOT operate the vehicle if there are any damaged parts.
- Carefully clean the vehicle with a damp cloth and mild soap. Do not get water in or near any electrical parts. Do not wash the vehicle with a hose.
- Store the vehicle indoors or use a tarp to cover it. Keep away from stoves, heaters, or other sources of heat.

17 Troubleshooting Guide

Completely read through the manual and troubleshooting guide before contacting Customer Service.

Problem	Potential Cause	Solution
Vehicle does not run	Battery is low	Recharge the battery
	Thermal fuse tripped	Reset fuse
	Snap pins are loose	Tighten snap pins
	Loose wires or loose connectors	Ensure the battery connectors are securely attached. If wires are loose, contact Consumer Service for repairs
	Battery is dead	Call Customer Service for replacement battery
	Electrical system is damaged	Call Customer Service for repairs
	Motor is damaged	Call Customer Service for repairs
Vehicle only runs for a short time	Undercharged battery	Ensure a secure connection when the battery is recharging. Recharge for at least 8-12 hours
	Overcharged battery	Never charge the battery for more than 15 hours
	Battery is old	Replace battery
Vehicle runs slowly	Battery is not fully charged	Ensure a secure connection when the battery is recharging
	Battery is old	Call Customer Service to order replacement battery
	Too much weight on vehicle	Reduce weight on vehicle (25kg max)
	Harsh conditions	Operate the vehicle on level ground and safe surfaces

Troubleshooting Guide 18

Problem	Potential Cause	Solution
Vehicle needs a push to start	Loose wires or loose connectors	Ensure the battery connectors are securely attached. If wires are loose, contact Consumer Service for repairs
	“Dead spot” on motor	A “dead spot” means electricity is not being delivered to the terminal. Contact Consumer Service for repairs
Difficulty shifting	Attempting to shift while vehicle is moving	Stop the vehicle before shifting
Motor or gear box making grinding noises	Motor or gear damage	Contact Consumer Service for repairs
Battery will not recharge	Charger is not plugged in	Plug in the charger to a functional wall outlet
	Charger is not working	Call Consumer Service for a replacement
	Loose connector or loose adapter	Check that the connectors are securely plugged in to each other
Battery makes bubbling noise while recharging	This is normal	No action required
Charger is warm	This is normal	No action required

19 Service and Repairs

If your product requires service, repairs or replacement parts, please visit us online at www.electricrideon.com.au

HUNTER PRODUCTS

233 Bay Street, Brighton, Victoria 3186

Ph: 1800 224 094

Office hours: Monday to Friday 9am to 5pm AEST

Email: enquiries@hunterproducts.com.au

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Where a failure does not amount to a major failure, we are entitled to choose between providing you with a repair, replacement or refund. To obtain compensation, you would need to provide documentary evidence of the loss or damage suffered, and documentary evidence that such loss or damage was a reasonably foreseeable consequence of a failure by us to comply with a consumer guarantee under the Australian Consumer Law. Such evidence may include photographs, statutory declarations, receipts or reports (e.g. from your doctor), depending on the loss or damage.

In addition to all rights and remedies to which you may be entitled under the Competition and Consumer Act 2010 (Commonwealth) and any other relevant legislation, the manufacturer warrants this product to be free from defects in materials or workmanship for a period as stated on the packaging from the date of purchase.

In order to claim under this warranty, you will need to bring the product to the store of purchase, along with proof of purchase (typically this will be a receipt). Any cost incurred by you in bringing the product to the service desk will be borne by you. We will then, at our option, either repair or replace the product, or refund your money and take back the product.

Our liability under this manufacturer's warranty is subject to us being satisfied that a defect was caused by defective workmanship or materials, and was not caused by or substantially contributed to by other factors, or circumstances beyond our control, including (but not limited to) defective installation, maintenance or repair, alteration or modification of the product in any manner not recommended by the manufacturer or any neglect, misuse or excessive use.

The benefits conferred by this manufacturer's warranty are in addition to all rights and remedies conveyed by the Competition and Consumer Act 2010 (Commonwealth), and any other statutory rights to which you may already be entitled, and this warranty does not exclude, restrict or modify any such rights or remedies that are implied by law.

HUNTER PRODUCTS

233 Bay Street, Brighton, Victoria 3186

Ph: 1800 224 094

Office hours: Monday to Friday 9am to 5pm AEST

Email: enquiries@hunterproducts.com.au