


Operation Manual

Model No:7541(ZP5158)

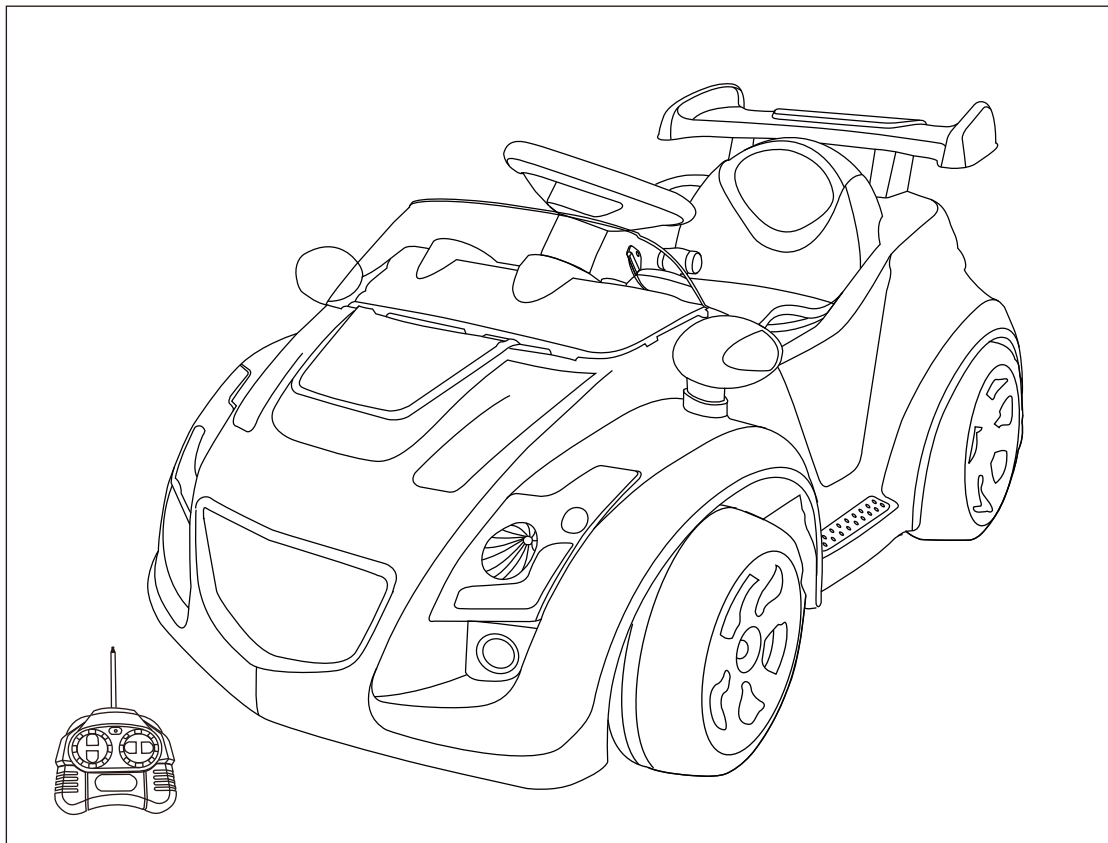

Maximum user weight: 30 kg

Please read this manual carefully before operating this vehicle.

Always wear a helmet when riding.

Suitable for ages 3 years+ .

Your new vehicle requires to be assembled by an adult only.

This instruction manual has to be kept since it contains important information

**PLEASE NOTE: IN CASE OF PRODUCT FAULT DO NOT RETURN THIS PRODUCT TO STORE.
PLEASE CONTACT HUNTER PRODUCTS CUSTOMER SERVICE TOLL FREE NUMBER: 1800 224 094**


Parts list:

- x 1 Car Body**
- x 1 Steering wheel (with fixing bolts & nuts)**
- x1 Rear Spoiler**
- x 4 Wheels**
- x 4 Wheel hub**
- x1 Seat**
- x1 Windshield**
- x2 Left& right mirrors**
- x4 Wheel cover**




- x1 Assembly parts bag:**
- x4 8mm self-locking nut**
- x3 10mm washer**
- x4 8mm washer**
- x5 4*16mm screw**
- x2 3*14mm screw**

Additional:

- x1 Instruction manual**
- x1 Charger (Input -240V 50Hz ; Output -6V 1000mA)**
- x1 Radio controller, Require 2x1.5V AA LR6
batteries(Batteries not included)**
- x2 8mm spanner**

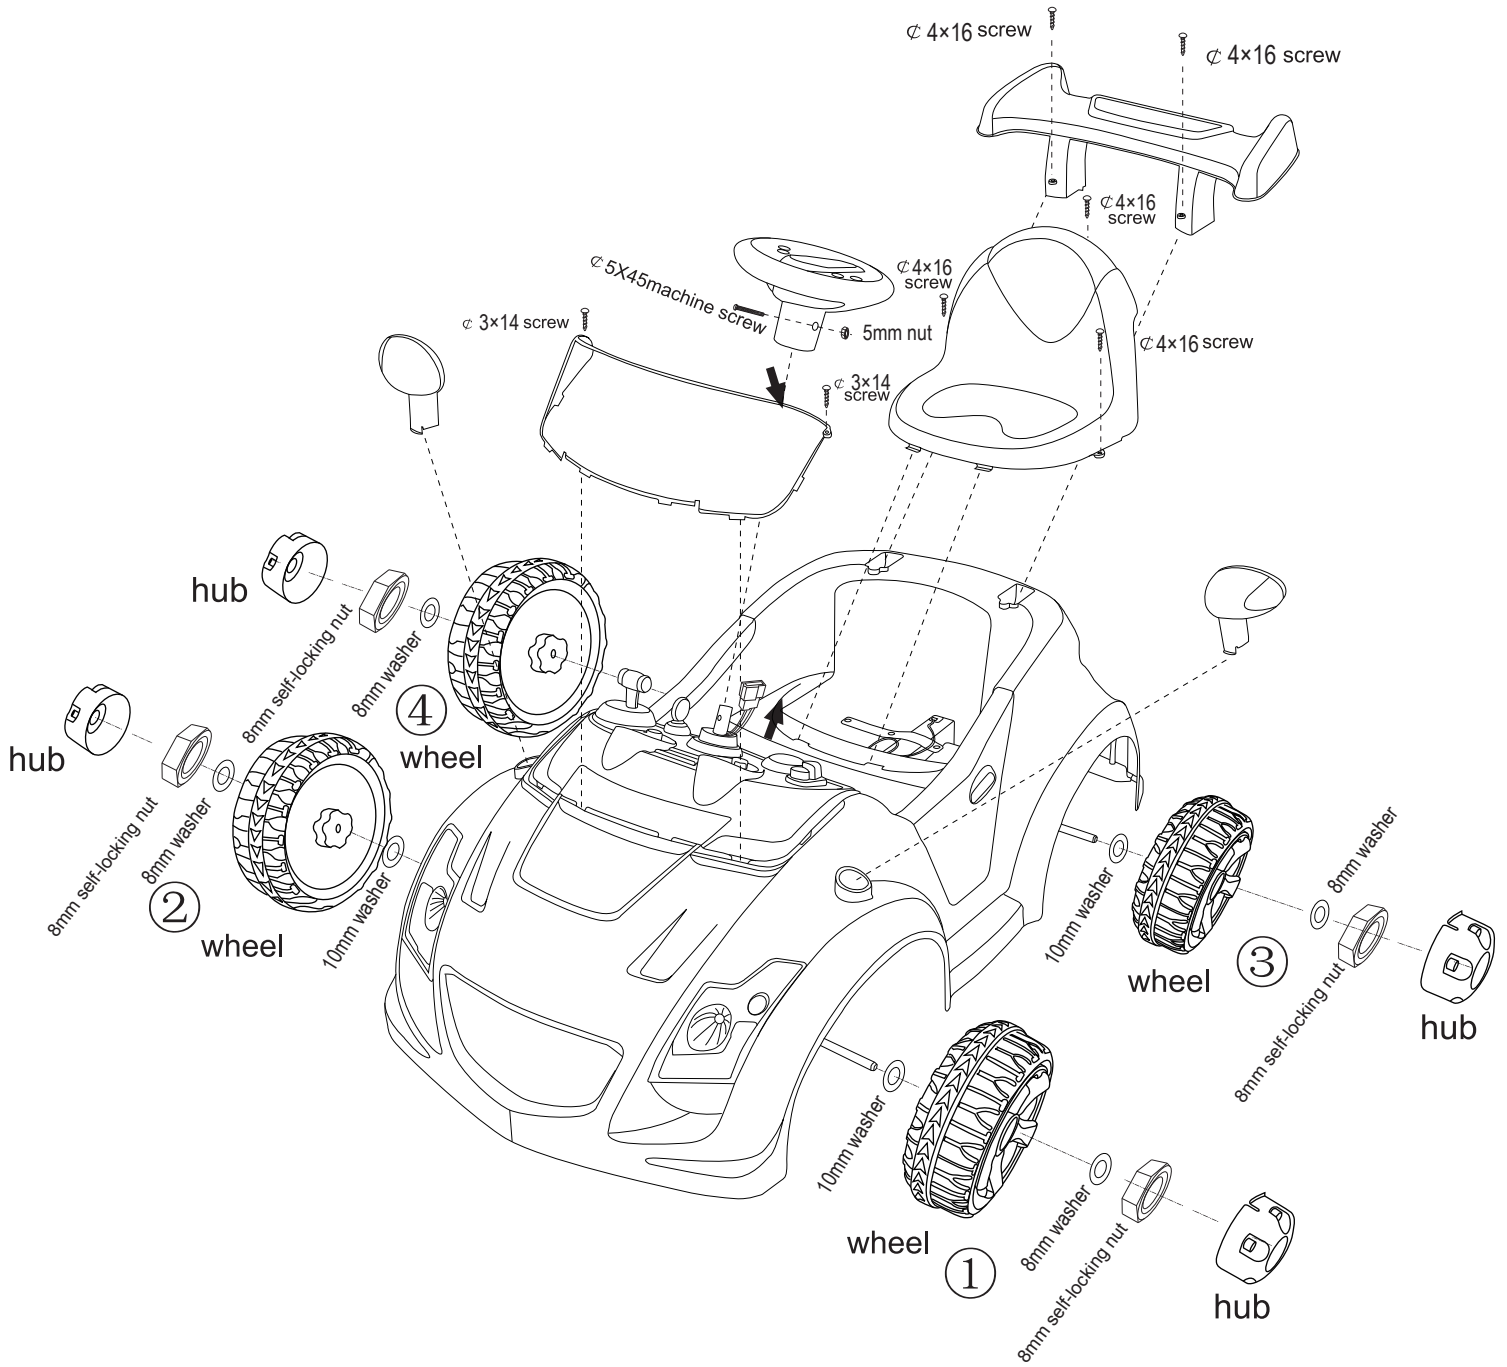

Tool required

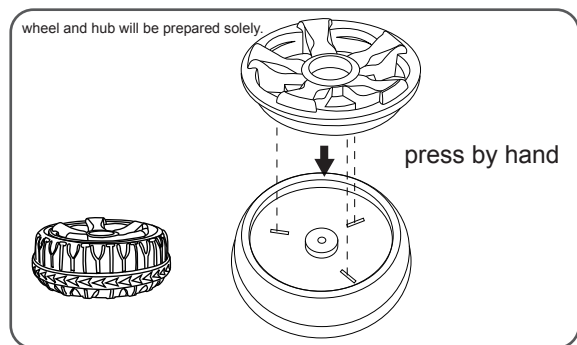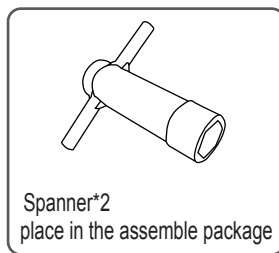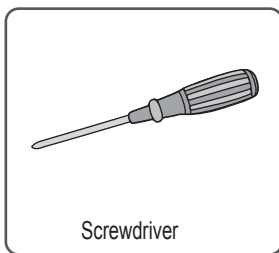


**PLEASE NOTE: IN CASE OF PRODUCT FAULT DO NOT RETURN THIS PRODUCT TO STORE.
PLEASE CONTACT HUNTER PRODUCTS CUSTOMER SERVICE TOLL FREE NUMBER: 1800 224 094**


1.SPECIFICATIONS:

Suitable age	3years+	Use in temperature range	0-40°C
Maximum weight	30kgs	Battery	1Pc sealed & enclosed Lead -acid storage battery(6V7Ah)
Speed	3.5 - 4km/h	Fuse	10A
Charging Input & Output	Input:240V - 50Hz Output:6V1000mA	External dimension (after assembling)	108(L) × 62(W) × 56(H)
Charge time	8-10hours	Life of battery	300 times approximately


2.HOW TO ASSEMBLE THE CAR:

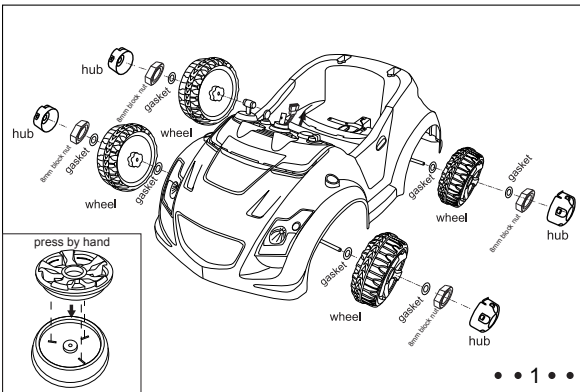


1.Assemble the wheels as the above picture.

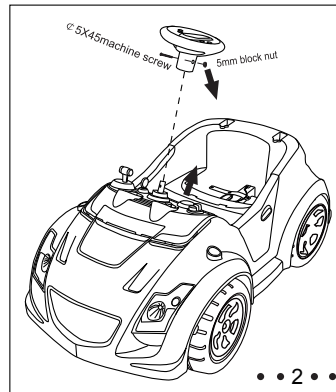


2.Assemble the steering wheel as the above picture.

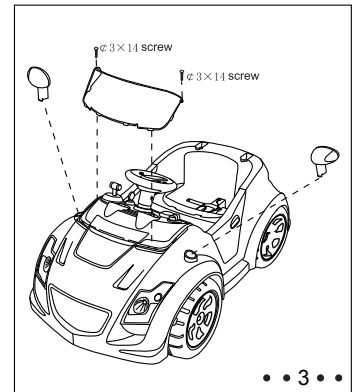


3.Assemble left&right mirrors and windshield as picture list.

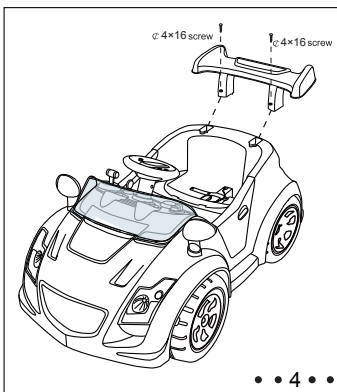

4.Insert the rear spoiler and fix with 4*16 screw.

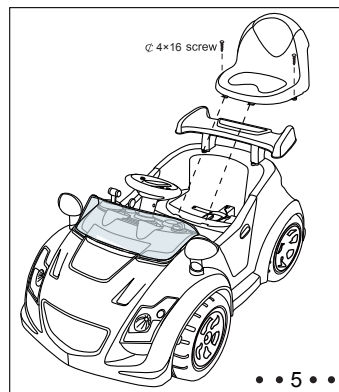


5.Assemble the seat as picture.

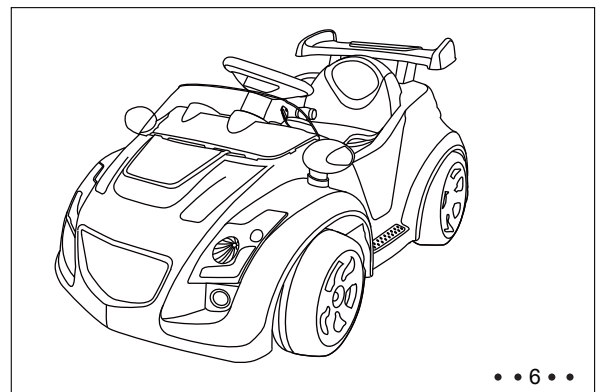

6.The car has been assembled after 5 steps as picture now.

**PLEASE NOTE: IN CASE OF PRODUCT FAULT DO NOT RETURN THIS PRODUCT TO STORE.
PLEASE CONTACT HUNTER PRODUCTS CUSTOMER SERVICE TOLL FREE NUMBER: 1800 224 094**

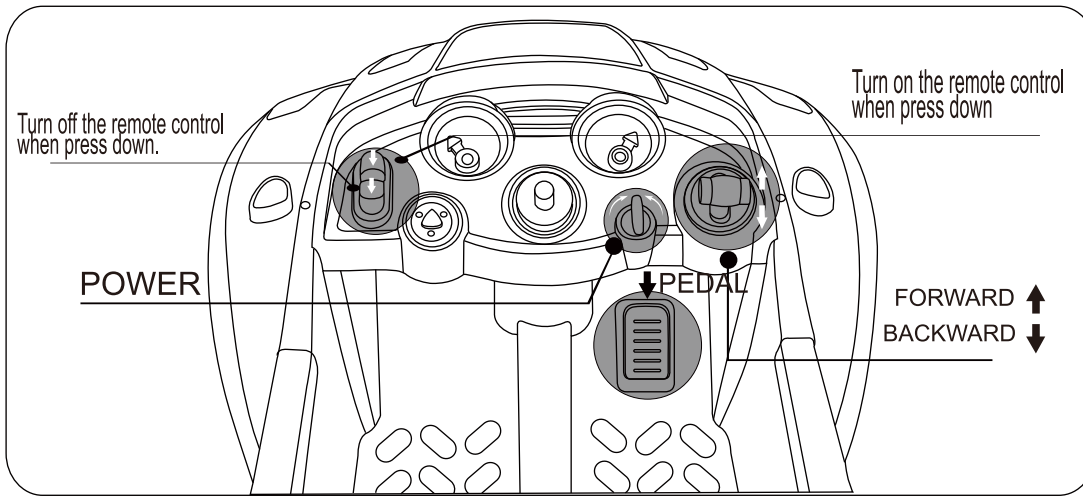

3. FUNCTION:


Forward and backward shifter:
 Push the shifter forward, and the car goes forward.
 Push the shifter backward, it goes backward.
 Make sure you come to a complete stop before changing the directions.

3a. Radio control Function

Insert 2AA (1.5V) batteries into the controller.
 Turn Power ON.
 Press F to go Forward and B to reverse.
 Do not mix old and new batteries
 Only adults allowed to change the batteries.

⚠ CAUTION

For manual mode – Turn the switch to OFF RC
 For Radio control mode – Turn the switch to ON RC.
 Please ensure switch is in OFF position at all times when vehicle is not in use

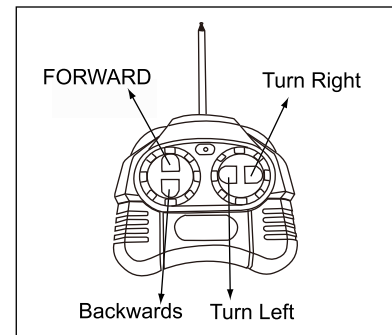

4.HOW TO CHARGE AND REPLACE THE CAR BATTERY

1.Before first time use,lift up the seat and connect battery wires with RED to RED and BLACK to BLACK. If you fail to do this,connection may cause short circuit or faults.

IMPORTANT!
 Before the first use,you should charge the battery for a "full" 10 hours.
 Unit will not operate unless connected!
 Lift the seat and connect the red wire to the battery (positive terminal) as shown in below diagram.

red terminal red connector

**PLEASE NOTE: IN CASE OF PRODUCT FAULT DO NOT RETURN THIS PRODUCT TO STORE.
 PLEASE CONTACT HUNTER PRODUCTS CUSTOMER SERVICE TOLL FREE NUMBER: 1800 224 094**

2. Please insert the charger into this hole charging the battery should only be done by an adult.


Caution: You must charge the 6-Volt battery for a "Full" 10 hours prior to first use.

Never charge the battery longer than 15 hours.

Failure to charge the battery as directed will cause permanent damage to the battery

After each use, or once a month minimum, recharge the battery of your vehicle for 8-10 hours

Do not charge the battery longer than 15 hours.

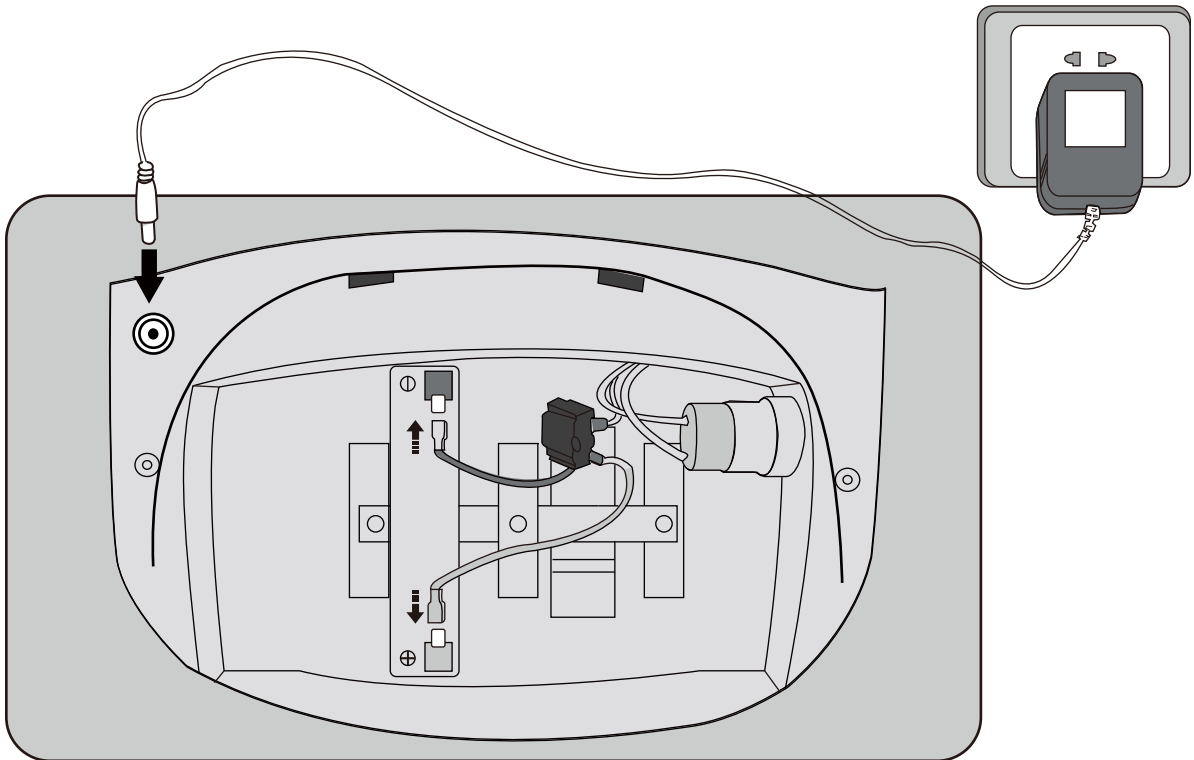

! WARNING

• PREVENT FIRE AND ELECTRIC SHOCK:

- Use ONLY battery and charger provided by manufacturer. Use of the wrong type of battery for charger could cause a fire or explosion.
- DO NOT use the battery or charger for any other product. Overheating, fire or explosion could occur.
- Never modify the electric circuit system. Alterations could cause a shock, fire or explosion.
- DO NOT open the battery. Battery contains lead acid and other materials that are toxic and corrosive.
- DO NOT open the charger. Exposed wiring and circuitry inside case may cause electric shock.
- ONLY ADULTS may handle or charge the battery. NEVER a child to handle or charge the battery. Battery is heavy and contains lead acid (electrolyte).
- DO NOT drop the battery. Permanent damage to the battery could occur or cause serious injury.
- Before charging the battery, check for wear or damage to the battery, charger and the connectors.
- DO NOT charge the battery if any damage to parts has occurred. Replace with manufacturer's parts ONLY.
- DO NOT allow the battery to drain completely. Recharge the battery after each use or once a month if not used regularly.
- DO NOT charge battery upside down.
- DO NOT allow the battery to drain completely or to the vehicle is driving at a very slow speed.
- ALWAYS secure the battery with the bracket. Battery can fall out and injure a child if vehicle tips over.

PLEASE NOTE: IN CASE OF PRODUCT FAULT DO NOT RETURN THIS PRODUCT TO STORE.

PLEASE CONTACT HUNTER PRODUCTS CUSTOMER SERVICE TOLL FREE NUMBER: 1800 224 094

IMPORTANCE NOTES

- **Charging should only be done by an adult.**

- Your new battery must be charged for at least for 10 hours before you use it in your vehicle for the first time.
- The battery must be upright while charging.
- The charger is not a toy.
- Do not short circuit the battery.
- You do not need to remove the battery from you vehicle to recharge it.
- Before charging the battery, examine the battery case for cracks and other damage which may cause lead-acid(electrolyte) to leak during the charging process. If damage is detected, do not charge the battery or use it in your vehicle. Battery acid is very corrosive and can cause severe damage to surfaces it contacts.
- Do not charge the battery on a surface(such as kitchen counter top)which could be damaged by the acid contained inside the battery. Take precautions to protect the surface on which you charge your battery.
- Use only the supplied 6 Volt charger (AC240V 50Hz) with an output of DC6V 1000mA to charge your (6 Volt 7Ah) battery.

- **Adults Note:** Regularly examine the charger for damage to the cord, plug, housing or other parts that may result in the risk of fire, electric shock or injury. In the event of any damage, do not use the charger until the damage has been properly repaired.

- If your battery is old and will not accept a charge, do not leave it in the vehicle. Always remove a dead battery from the vehicle.

Please ensure to charge the(6V 7Ah) Battery once every a month to avoid damage to this unit.

NOTE: If power flow to the wall outlet is controlled by a switch, make sure the switch is ON.

Before first time use, charge the battery for at least 10 hours. Never charge the battery longer than 15 hours.

- Recharge you battery after each use for 8~10 hours. Do not charge the battery longer than 15 hours.
- Once the battery is charged, disconnect the charger connector from the battery connector. Simply re-connect the battery connector and motor connector.

Hint: if the connectors will not plug smoothly, turn it over and try it again! Do not force to connect the connectors.

BATTERY CARE:


If a battery leak develops, avoid contact with the leaking acid and place the damaged battery in a plastic bag. If acid comes in contact with skin or eyes, flush with cool water for at least 15 minutes and call a physician. If acid is internally ingested, give water, milk of magnesia or egg whites immediately. Never give emetics or induce vomiting. Call a physician.

- Charge your battery for at least 10 hours before first use. Never charge the battery longer than 15 hours. Overcharging or undercharging the battery may shorten battery life and decrease vehicle running life.
- Charge the battery after each use, regardless of how long the vehicle was used.
- Charge the battery before storing the vehicle.
- Leaving the battery in a discharged condition will ruin it. Please ensure to charge the (6V 7Ah) battery once every a month to avoid damage to this unit.
- Do not store the battery in temperature above 40°C or below 0 °C.
- Prevent the battery from moving freely inside the battery compartment. Always examine the battery retainer to secure the battery in the battery compartment.
- Examine the battery, charger and their connectors for excessive wear or damage each time you charge the battery. If damage is detected, do not use the charger or the battery until you have replaced the worn or damaged part.

5. Fuse

The vehicle is equipped with a self-resetting fuse. When the vehicle is overloaded or operated incorrectly; the self-resetting fuse will be cut off for 15-20seconds before becoming operational again.

The self-resetting fuse is under the seat (Refer to the picture.)

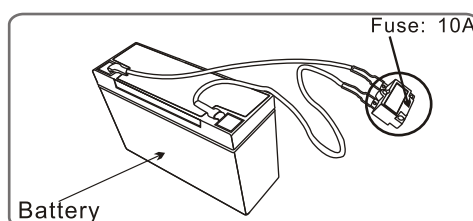

PLEASE NOTE: IN CASE OF PRODUCT FAULT DO NOT RETURN THIS PRODUCT TO STORE.

PLEASE CONTACT HUNTER PRODUCTS CUSTOMER SERVICE TOLL FREE NUMBER: 1800 224 094

To avoid electric shock, follow these guidelines:

- DO NOT overload the vehicle. The maximum user weight is 30kg.
- DO NOT tow any thing behind the vehicle.
- DO NOT drive up steep slopes.
- DO NOT drive into fixed objects, which may cause the wheels to spin, causing the motor to overheat.
- DO NOT drive in very hot weather, components may overheat.
- DO NOT allow water or other liquids to come in contact with the battery or other electric components.
- DO NOT tamper with the electric system. Doing so may create a short circuit, causing the fuse to trip.

6.Trouble Shooting

Problem	Possible Cause
<p>(1). The 6-volt battery will not recharge</p>	<ol style="list-style-type: none"> 1. Battery connector is loose. Make sure the battery connector is firmly plugged in. 2.The 6-volt battery will not recharge. Make sure the charger is plugged into a 240V wall outlet and the power flow to the outlet is on. 3.Charger is not plugged in. Make sure the charger is plugged into a 240V wall outlet and the power flow to the outlet it turned on 4.Check and replace fuse if necessary
<p>(2). The vehicle does not run</p>	<ol style="list-style-type: none"> 1.The battery may be low on power. After each use, or once a month minimum, charge the battery for a “full” 8-10 hours. DO NOT leave the battery on the charger for more than 15 hours. 2.Motor connector or wires are loose. 3.Battery is dead. Have you properly maintained the battery according to the directions? Is the battery old? Your battery may need to be replaced. Contact Hunter Products Customer Service for assistance on 1800 224 094 4.Electrical system is damaged. Water may have corroded the system, or loose dirt, gravel or sand might have jammed the switch. Check. 5.Motor is damaged. Contact Hunter Products Customer Service for assistance on 1800 224 094
<p>(3). The vehicle does not run very long.</p>	<ol style="list-style-type: none"> 1.Battery may be undercharged. You may not be charging the battery long enough. After each use, or once a month minimum, charge the battery for a “full” 8-10 hours. DO NOT leave the battery on the charger for more than 15 hours. 2.Battery is old. The 6-volt battery will eventually lose the ability to hold a charge. Depending on the amount of use, and varying conditions, the battery should operate for one to three years. Replace the battery with a new 6-volt battery Available through Hunter Products Customer Service for assistance on 1800 224 094

**PLEASE NOTE: IN CASE OF PRODUCT FAULT DO NOT RETURN THIS PRODUCT TO STORE.
PLEASE CONTACT HUNTER PRODUCTS CUSTOMER SERVICE TOLL FREE NUMBER: 1800 224 094**

(4). Battery buzzes or gurgles when charging.	1.This is normal and not a cause for concern. It may also be silent when charging, which is also normal.
(5). The vehicle runs sluggishly	<p>1.Battery needs recharging. After each use, or once a month minimum, charge the battery for a “full” 8-10 hours. Never charge the battery longer than 15 hours.</p> <p>2.Battery is old. The 6-volt battery will eventually lose the ability to hold a charge. Depending on the amount of use, and varying conditions, the battery should operate for 1 to 3 years. Replace the battery with a new 6-volt battery Available through Hunter Products Customer Service for assistance on 1800 224 094</p> <p>3.Vehicle is overloaded. Maximum user weight is 30 kg. DO NOT overload the vehicle. DO NOT tow anything behind the vehicle.</p>

7.CAUTION FOR SAFETY WARNING!

- Prevent Injuries
- Direct Adult Supervision Required.
- Do not wash the vehicle with water. Clean it with a cloth only
- Never Ride at Night.
- Keep Children within Safe Riding areas. These areas must be:
 - Away from swimming pools and other bodies of water to prevent drownings
 - Generally use on flat surface to prevent tipovers
 - Away from steps, cars, steep inclines, roads and alleys.

IMPORTANT!

Use this vehicle ONLY outdoors. Most interior flooring can be damaged by riding this vehicle indoors. Teach Safety Rules to Children

-While children can quickly develop the skill necessary to drive this vehicle, it is important to remember that their judgment skills are still very immature. Unsupervised driving by children can lead to serious injury.

-Before children use this vehicle, an adult should carefully evaluate the driving area as well as the children’s skill level and ability to drive this vehicle safely. Children are not always able to recognize or anticipate hazards, even when they have been taught about them. There is no acceptable substitute for direct adult supervision.

-Teach appropriate safety rules to your child before allowing operation of this vehicle. These rules should also be reviewed with neighborhood children or other playmates who want to drive the vehicle.

-It is recommended to store the vehicle indoors to eliminate damage from weather elements. If stored outside, the entire vehicle should be covered to limit damage from outdoor weather elements. Please take special care of battery and motor when storing outdoors.

**PLEASE NOTE: IN CASE OF PRODUCT FAULT DO NOT RETURN THIS PRODUCT TO STORE.
PLEASE CONTACT HUNTER PRODUCTS CUSTOMER SERVICE TOLL FREE NUMBER: 1800 224 094**

8. ABOUT THE STEERING WHEEL & RADIO CONTROLLER



WARNING!

- Do not use a different size battery.
- Non-rechargeable batteries(AA type) are not to be recharged.
- Rechargeable batteries (AA type) are to be removed from the toy before being charged.
- Batteries are to be inserted with the correct polarity..
- Exhausted batteries (AA type) are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Different types of batteries or new and used are not to be mixed.
- Metal supporter must be firmly fixed by self-tapping screws before playing.
- Batteries should be installed under adult supervision

INSERT BATTERIES FOR RADIO CONTROLLER

WARNING! Rechargeable batteries are only to be charged under supervision.

- 1) Open the battery cover by unscrewing the screw.(see PIC.1)
- 2) Please install 2×AA(1.5V)2L6 batteries. Please ensure batteries are inserted with correct polarity. (BATTERIES NOT INCLUDED)
- 3) Push the switch to “ON” position, and control the car Forward, Reverse Turn left and Turn right.
- 4) Push down the switch to “OFF” position, the controller power is cut off and you can't control the car. (see PIC.2)

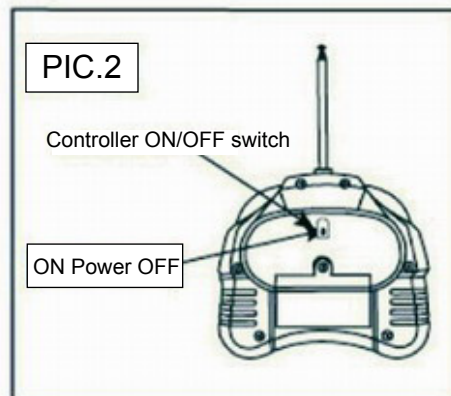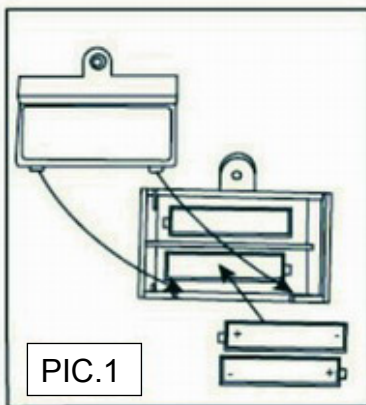

REMOVE BATTERIES

- 1) Use a screwdriver to unscrew and remove battery cover.
- 2) Carefully insert 2 new “AA” batteries.
- 3) Replace cover and tighten screw.

**PLEASE NOTE: IN CASE OF PRODUCT FAULT DO NOT RETURN THIS PRODUCT TO STORE.
PLEASE CONTACT HUNTER PRODUCTS CUSTOMER SERVICE TOLL FREE NUMBER: 1800 224 094**

RIDING RULES

Make sure children know and follow these rules for safe driving:

ADULT SUPERVISION REQUIRED AT ALL TIMES WHILE DRIVING

1. Always wear a helmet when riding.
2. Always sit on the seat.
3. Always wear shoes.
4. Only 1(one) rider at a time. A child who is not sitting on the seat or who is standing on the vehicle could fall off, cause a tip-over or block the driver's view. A child could be seriously injured.
5. Do not allow any child to drive the vehicle in the street or near moving(motorized) vehicles.
6. Do not allow any child to drive near bodies of water (such as pools or creeks), obstructions (such as furniture, low tree limbs or play equipment),or drop-offs(such as stairs or decks).
7. Do not allow any child to drive the vehicle in the dark. A child could encounter unexpected obstacles and have an accident. Operate the vehicle only in the daytime or a well-lit area.
8. Do not allow your child to drive on sloped or inclined surfaces. Restrict your child's driving to generally level ground only!
9. Do not allow your child to drive or down inclines.
10. Do not allow your child to drive down or across a steep slope. Do not ride on slopes greater than 15 degrees, sand, other soft surfaces, wet or slippery surfaces.
11. Do not change Forward or Reverse direction of the toy whilst moving.
12. Warranty period is 90 days from the date of purchase.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Where a failure does not amount to a major failure, we are entitled to choose between providing you with a repair, replacement or refund. To obtain compensation, you would need to provide documentary evidence of the loss or damage suffered, and documentary evidence that such loss or damage was a reasonably foreseeable consequence of a failure by us to comply with a consumer guarantee under the Australian Consumer Law. Such evidence may include photographs, statutory declarations, receipts or reports (e.g. from your doctor), depending on the loss or damage.

In addition to all rights and remedies to which you may be entitled under the Competition and Consumer Act 2010 (Commonwealth) and any other relevant legislation, the manufacturer warrants this product to be free from defects in materials or workmanship for a period as stated on the packaging from the date of purchase.

PLEASE NOTE: IN CASE OF PRODUCT FAULT DO NOT RETURN THIS PRODUCT TO STORE.

PLEASE CONTACT HUNTER PRODUCTS CUSTOMER SERVICE TOLL FREE NUMBER: 1800 224 094

In order to claim under this warranty, you will need to bring the product to the store of purchase, along with proof of purchase (typically this will be a receipt). Any cost incurred by you in bringing the product to the service desk will be borne by you. We will then, at our option, either repair or replace the product, or refund your money and take back the product.

Our liability under this manufacturer's warranty is subject to us being satisfied that a defect was caused by defective workmanship or materials, and was not caused by or substantially contributed to by other factors, or circumstances beyond our control, including (but not limited to) defective installation, maintenance or repair, alteration or modification of the product in any manner not recommended by the manufacturer or any neglect, misuse or excessive use.

The benefits conferred by this manufacturer's warranty are in addition to all rights and remedies conveyed by the Competition and Consumer Act 2010 (Commonwealth), and any other statutory rights to which you may already be entitled, and this warranty does not exclude, restrict or modify any such rights or remedies that are implied by law.

HUNTER PRODUCTS

Level 2, 424 Warrigal Road Moorabbin 3189

Ph: 1800 224 094

Email: enquiries@hunterproducts.com.au

**PLEASE NOTE: IN CASE OF PRODUCT FAULT DO NOT RETURN THIS PRODUCT TO STORE.
PLEASE CONTACT HUNTER PRODUCTS CUSTOMER SERVICE TOLL FREE NUMBER: 1800 224 094**

PLEASE NOTE:

**IN CASE OF PRODUCT FAULT DO NOT
RETURN THIS PRODUCT TO STORE.**

PLEASE CONTACT HUNTER PRODUCTS

CUSTOMER SERVICE TOLL FREE NUMBER: 1800 224 094

Warranty period is 90 days from the date of purchase.

**Always wear a helmet when riding this vehicle!
To reduce the risk of injury, adult supervision
is required all times.**