



JE128 MINNIE MOUSE Troubleshooting Guide

Please follow the directions in the attached service guide to check the connections on your ride on. Most times it is a loose plug or switch that causes electric ride's to stop working.

Keep in mind the ride will not operate if the power adaptor/charger cable is plugged into the ride, this is a safety feature to ensure a child does not take off while it's plugged in and damage it.

Disconnect the charger from the car before trying to operate it.

To rule out a faulty fuse:

- 1. Under the seat in the battery compartment please disconnect the short cable from the red terminal of the battery.
- 2. Then disconnect the long cable that comes from the ride on wiring to the fuse
- 3. Connect this cable directly to the red terminal of the battery.

So what you have left over is the small black fuse and a short cable attached to it that are not connected to the ride.

This is bypassing the fuse, try this to see if it is in fact a faulty fuse.

If you have a ride on that is 18+ months old and after following these directions you cannot get it going we recommend removing the battery and having the battery & charger tested by a professional.

Batteryworld.com.au offer this service over the counter in your local outlet.

Trouble Shooting Guide

Item No:JE128 Minnie Mouse Vintage Car Please be careful when using this tools!

Part 1: Check the connection of Forward&Reverse switch












Step 2

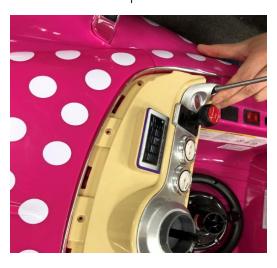

Step 3



Step 4


Step 5 (Check the connection of Forward&Reverse switch)



Step 1 (Turn over the car and take down the gray and black plastic parts as shown)




Step 2

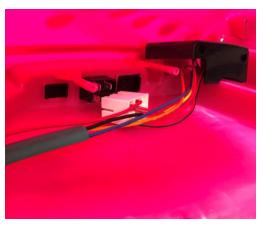

Step 3 (Check the connection of Power On-Off switch)



Step 4

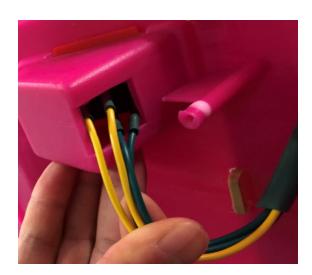


Step 5 (Check the connection of Pedal switch)







Step 2

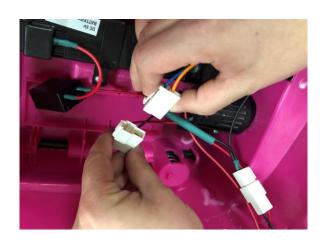

Step 3 (Gearbox cable)



Step 4 (Battery cable)



MOTOR PLUG - PIN TROUBLESHOOT

<u>No</u>. Pin pushed to side. When plugged together the pin is not connecting with other plug.

