
# **OPERATION MANUAL**


## ZPV002 CUSTOMISABLE 6V RIDE ON ITEM: 4233 PAW PATROL

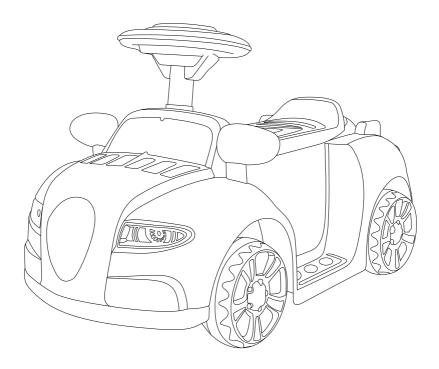

AGE: 3 years + MAXIMUM USER WEIGHT: 20 kgs MADE IN CHINA

#### 1. The use of informaton:

- (1) Before using it for the first time, lift up the seat and connect the main wire to the battery wire (with RED to RED, BLACK to BLACK) any wrong connection may cause short circuit or other faults.
- (2) The charge socket is under the sterrning wheel, with charge indentification.
- (3) Charge the battery if the vehicle runs slower than normal.
- (4) Don't charge the battery for over 15 hours each time.
- (5) Charge the battery fully if you will store it for a long time, then charge it every 3 month, in this way you can extent the lifetime of the battery.
- (6) It is normal that the power charger and the battery jar become warmer while the battery is on charging.

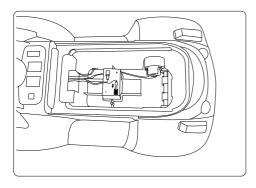

#### 2. Specification:

- (1) Battery: Enclosed lead-acid battery (6V, 4.5AH)
- (2) Loading limitation: 20kg.
- (3) Power: input 240V.
- (4) Duration of the battery: around one hour functioning with 8-12 hours charging. The vehicle can be used 1 hour.
- (5) Size: 70\*35\*42.5 cm

FOR ANY PRODUCT ENQUIRIES OR ISSUES PLEASE CONTACT HUNTER PRODUCTS AT WWW.ELECTRICRIDEON.COM.AU OR TOLL FREE HELP LINE 1800 224 094.

## WARNING:

ADULT ASSEMBLY REQUIRED. Read entire instructions carefully before assembling this product.

### WARNING: ASSEMBLY

- Keep these instructions for future reference.
- Prior to assembly, this package contains small parts: hardware which is a choking hazard and may contain sharp edges and sharp points. Keep product away from children until assembled.
- Ensure working area is free of danger, always dispose packaging material in such a way that it may not cause any harm.
   Plastic bags can be dangerous. To avoid suffocation keep plastic bags away from babies and children.
- To prevent serious injury, children must not use the equipment until completely assembled.
- Spare parts exhange should be operated by an adult, because the battery is very heavy and the internal acidic electrolyte, if any leakage should avoid touch the liquid, and need a professional disposition. If accidental with the electrolyte, it is timely at least 15 minutes rinse with cold water and seek medical treatment.

#### **IMPORTANT - MUST READ CAREFULLY**

#### WARNING: USE

TO AVOID SERIOUS INJURY: Continuous adult supervision is required while this vehicle is in operation.


- To reduce the risk of injury, adult supervision is required. DO NOT leave the child play vehicle alone to avoid accidents.
- NEVER use in or near roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water and dangerous place, always wear shoes, and NEVER allow more than 1 rider.
- NEVER allow children to ride at night.
- Instruct children on proper use of this product and to sit properly when driving. DO NOT RIDE VEHICLE STANDING UP.
- · It is recommended that the rider always wears safety equipment such as fitted helmet when riding the vehicle.
- Ride-on toys should be used with caution since skill is required to avoid falls or collisions which may cause injury to the user or others.
- · The vehicle is intended for use on flat, level surfaces.
- DO NOT ride the vehicle indoors. It is intended for outside use ONLY. Interior floors can be damaged by riding the vehicle indoors.
- DO NOT tow objects behind the vehicle or overload the vehicle as doing so will cause damage.
- · NOT to be used in traffic.

FOR ANY PRODUCT ENQUIRIES OR ISSUES PLEASE CONTACT HUNTER PRODUCTS AT WWW.ELECTRICRIDEON.COM.AU OR TOLL FREE HELP LINE 1800 224 094. When the car cannot move ,please check the fuse is fusing or not.

#### 5. Trouble shooting:

| Problem   | Possible Solutions  |
|---|---|
| The vehicle does not move                                     | <ul> <li>Charge the battery. (Charge battery after each use.)<br/>NOTE: vehicle will be cut off electricity during charging.</li> <li>Check all electrical connections.</li> <li>Check all switch whether "on" position.</li> <li>Check foot switch or manual button is stuck down so that can not press.</li> <li>The fuse may have been activated due to excessive weight or weight or rough driving conditions. Wait at least 10~20 seconds, and the vehicle will reset itself.</li> <li>Check is whether there is debris stuck wheels.</li> </ul> |
| The vehicle begins to run slow                                | <ul> <li>Charge the battery. (Charge battery after each use.)</li> <li>Only allow one rider at a time.</li> <li>DO NOT exceed child weight limit: 20kg</li> <li>Drive on level ground.</li> <li>Battery may be old or not accepting a full charge.</li> <li>The battery will last from 1 to 3 years depending on care, use and environment.</li> <li>Replace with 6Volt 4.5 Ah battery only.</li> <li>Check is whether there is debris stuck wheels.</li> </ul>   |
| The vehicle runs erratically                                  | <ul> <li>There may be a problem with the fuse, or you may<br/>have a damaged battery.</li> </ul>  |
| The charger feels warm when in use                            | · This is normal.   |
| The gears sound very loud and/or are making a grinding noise. | · The gears may be broken.  |


#### 6. How to charge:

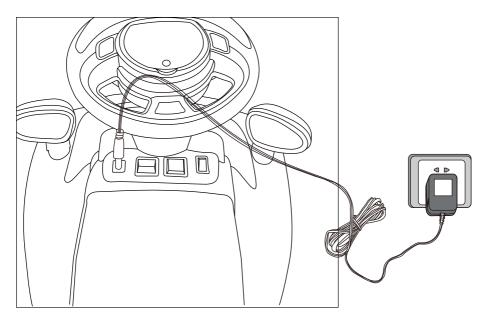


#### NOTE:

- (1) To assure the safety, battery charging and replaced only done by an adult.
- (2) Remove and insert battery with the correct polarity (+ and -).
- (3) First using, fully charger at least 10hours, normal recharging 8~10hours after every using, but NEVER charge over 15hours.
- (4) CHECK the charger, battery and plug before every charging, DO NOT use if it is broken.
  - DO NOT upside down the battery when charging.
- (5) DO NOT open or decompose the battery and charger, ONLY USE the type battery and charger recommended for the unit.
- (6) DO NOT short-circuit battery terminals.
- (7) DO NOT recharge non-rechargeable battery.
- (8) DO NOT mix old and new or different type of batteries.
- (9) DO NOT dispose of battery in fire as it may leak or explode.
- (10) Exhausted battery is to be removed from the toy.
- (11) When vehicle is not used for an extended time, remove battery to prevent possible leakage and damage to the unit. Charge the battery once per three months to extend the lifetime of the battery.



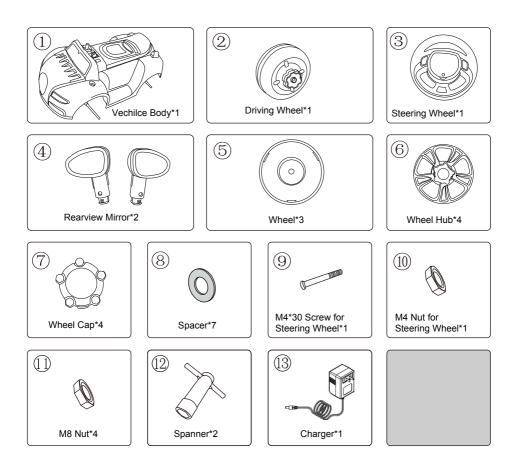


#### 8. Exploded diagram:

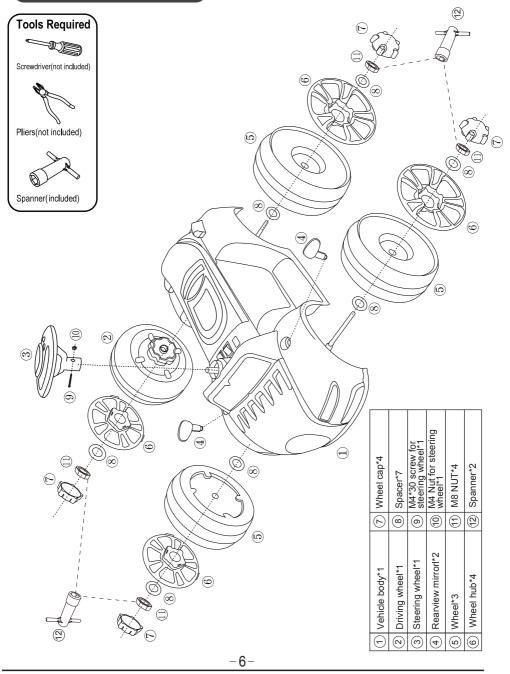


FOR ANY PRODUCT ENQUIRIES OR ISSUES PLEASE CONTACT HUNTER PRODUCTS AT WWW.ELECTRICRIDEON.COM.AU OR TOLL FREE HELP LINE 1800 224 094.

#### 9. How to install:

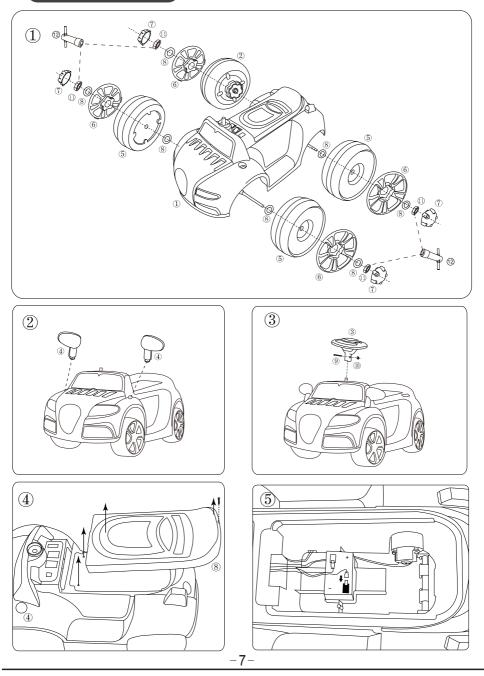


FOR ANY PRODUCT ENQUIRIES OR ISSUES PLEASE CONTACT HUNTER PRODUCTS AT WWW.ELECTRICRIDEON.COM.AU OR TOLL FREE HELP LINE 1800 224 094.

#### 9. How to install:

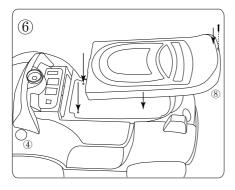

## 10.Operation:

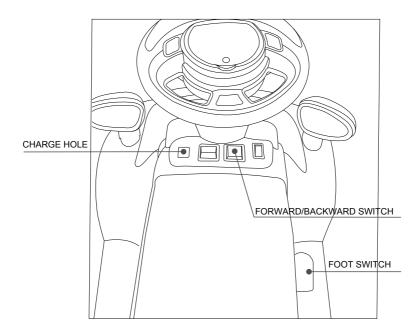

FOR ANY PRODUCT ENQUIRIES OR ISSUES PLEASE CONTACT HUNTER PRODUCTS AT WWW.ELECTRICRIDEON.COM.AU OR TOLL FREE HELP LINE 1800 224 094.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Where a failure does not amount to a major failure, we are entitled to choose between providing you with a repair, replacement or refund. To obtain compensation, you would need to provide documentary evidence of the loss or damage suffered, and documentary evidence that such loss or damage was a reasonably foreseeable consequence of a failure by us to comply with a consumer guarantee under the Australian Consumer Law. Such evidence may include photographs, statutory declarations, receipts or reports (e.g. from your doctor), depending on the loss or damage.

In addition to all rights and remedies to which you may be entitled under the Competition and Consumer Act 2010 (Commonwealth) and any other relevant legislation, the manufacturer warrants this product to be free from defects in materials or workmanship for a period as stated on the packaging from the date of purchase.

In order to claim under this warranty, you will need to bring the product to the store of purchase, along with proof of purchase (typically this will be a receipt). Any cost incurred by you in bringing the product to the service desk will be borne by you. We will then, at our option, either repair or replace the product, or refund your money and take back the product.

Our liability under this manufacturer's warranty is subject to us being satisfied that a defect was caused by defective workmanship or materials, and was not caused by or substantially contributed to by other factors, or circumstances beyond our control, including (but not limited to) defective installation, maintenance or repair, alteration or modification of the product in any manner not recommended by the manufacturer or any neglect, misuse or excessive use.

The benefits conferred by this manufacturer's warranty are in addition to all rights and remedies conveyed by the Competition and Consumer Act 2010 (Commonwealth), and any other statutory rights to which you may already be entitled, and this warranty does not exclude, restrict or modify any such rights or remedies that are implied by law.

HUNTER PRODUCTS

Level 2, 424 Warrigal Road Moorabbin 3189

Ph: 1800 224 094

Email: enquiries@hunterproducts.com.au

Our products are suitable for the following standard:

GB6675

ASTM-F963

EN71 AND EN62115