MOTOFIZED



JE1166 Bentley Troubleshooting Guide

Please follow the directions in the attached service guide to check the connections on your ride on. Most times it is a loose plug or switch that causes electric ride's to stop working.

Keep in mind the ride will not operate if the power adaptor/charger cable is plugged into the ride, this is a safety feature to ensure a child does not take off while it's plugged in and damage it.

Disconnect the charger from the car before trying to operate it.

To rule out a faulty fuse:

- 1. Under the seat in the battery compartment please disconnect the short cable from the red terminal of the battery.
- 2. Then disconnect the long cable that comes from the ride on wiring to the fuse
- 3. Connect this cable directly to the red terminal of the battery.

So what you have left over is the small black fuse and a short cable attached to it that are not connected to the ride. This is bypassing the fuse, try this to see if it is in fact a faulty fuse.

If you have a ride on that is 18+ months old and after following these directions you cannot get it going we recommend removing the battery and having the battery & charger tested by a professional.

Batteryworld.com.au offer this service over the counter in your local outlet.

TROUBLE SHOOTING GUIDE

ITEM NO: JE1166

DESCRIPTION:BENTLEY CAR
















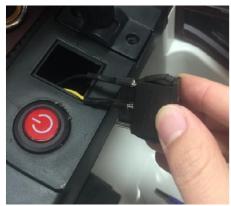

STEP 4



STEP 5

1. Per above steps to check the connection of Forward&Reverse,High-Low Speed and On-off Switches, be careful when use a straight screwdriver.




STEP 1




STEP 4 (Gearbox cable)



STEP 2

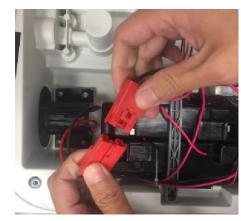


STEP 5 (Gearbox cable)

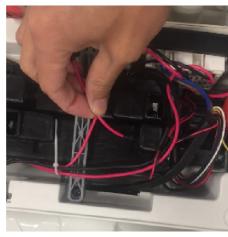

STEP 3 (Battery)

2.Per above steps to check the cables connection of Batteries and Gearboxes.

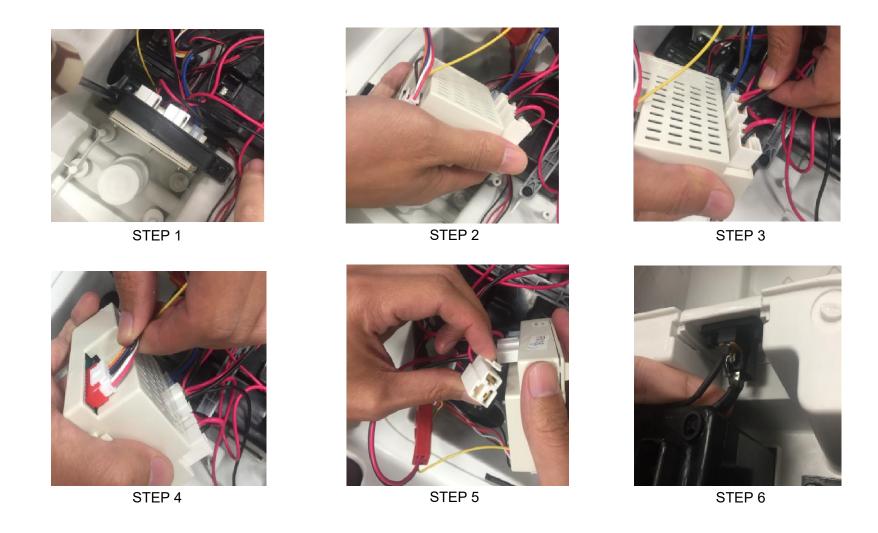

3. Per above steps to check the connection of remote control receiver and the charging hole.



MOTOR PLUG - PIN TROUBLESHOOT

<u>No</u>. Pin pushed to side. When plugged together the pin is not connecting with other plug.

