

Minnie / Mickey Bumpacar

Assembly & User Instructions - Please keep for future reference



Item No.: 0489
Model No.: TR1001



Item No.: 0472
Model No.: TR1001

Important

Age: 3 - 6 Years
Maximum user weight: 30kg

Warning!

1. Not suitable for children under 36 months. Small parts. Choking hazard!
2. Not suitable for children under 36 months due to its maximum speed
3. Not to be used in traffic

Important -

Please read these instructions fully before assembly or use
Please retain these instructions for future reference



Safety Information

Assembly & User Instructions - Please keep for future reference

General safety

- Where products need assembly they must always be assembled by an adult. As a parent/carer, it is also your responsibility to check the tightness of screws, nuts and bolts before each use and if necessary, adjust and re-tighten.
- This product may contain small parts and it is your responsibility as a parent/carer to exclude children from the area during assembly due to small parts.
- Remove protective material and poly bags and dispose of them responsibly before giving the assembled product to your child.
- Remember to retain these instructions for future reference.
- We have tried to make our toys as simple as possible to assemble but inevitably there will be one or two slightly more complex tasks. If you have any difficulties assembling your product, please contact us for advice.
- Please contact your retailer for information about end-of-life recycling under the EU WEEE regulations.

Positioning

- Do not allow your child to ride at night or in poor light conditions.
- Do not let your child play near steps, swimming pools / spas or other sources of water, on slopes, on streets or around cars, even if parked on your own property.
- It is prohibited to drive/use this product on the public highway.
- This product is designed to be used on smooth surfaces and should not be used on soft ground or in the rain or snow.

Before use

- Very Important. You Must Charge & Connect The Battery Before Fitting the Seat. Please refer to "Charging the Battery" (page 12)
- The lap-only seat belt must be adjusted manually. It is important that you adjust the belt for a snug fit over the child's hips, without any slack.
- When fitting the seat, make sure you don't trap any of the lap-only belt under the seat; you will notice there are cut-outs on both the sides of the seat, these allow the lap-only belt to fit correctly when you locate the seat into position.
- Dispose of all packaging material responsibly before giving this product to your child.

During use

- This product is only suitable for children 3 years and older.
- The maximum rider weight capacity for this product is 30Kg do not overload.
- Adult supervision is highly recommended when children play with wheeled toys. Your child's safety is your concern.
- Do not allow the child to ride with bare feet or without suitable footwear.
- Ensure the child keeps clothing, hands, hair, fingers and feet away from moving parts.
- The use of protective gear included approved helmets, gloves and pad is recommended.
- Store this product at room temperature; do not leave it outside or uncared for.
- Never let any child play with the battery or charger at any time, or let them charge the product.
- Do not use if product is faulty or damaged.
- Do not tamper with the battery or electrical parts inside the product.



Safety Information

Assembly & User Instructions - Please keep for future reference

Batteries for sounds (not included)

- All battery insertion/replacement must be carried out by an adult.
- Be sure to install batteries as instructed.
- Never mix alkaline, standard (zinc-carbon) or rechargeable (nickel cadmium) batteries or mix old and new batteries.
- Do not recharge non-rechargeable batteries.
- Ensure the contact surfaces are clean before installing batteries.
- Remove batteries before storage or when exhausted.
- Rechargeable batteries are to be removed from the toy before being charged.

Charging the 6v battery

- All charging and re-charging must be carried out by an adult.
- Do not attempt to use the product while it is being charged.
- Charging should be carried out under cover and in a well-ventilated area.
- Always ensure the charger is switched off before connecting it to the product/battery.
- Always ensure the charger is plugged into a wall outlet, Do not use an extension.
- Do not charge near sources of potential sparks, fires or flames or where flammable gases, liquids and materials are stored.
- During charging the battery and the charger may get hot.
- Only charge the battery for a maximum time of 8 - 10 hours.
- Do not leave the charger plugged into an outlet or connected to the product/battery once charging is completed.

Charging the 6v battery (contd)

- Never attempt to recharge a fully charged or partially used battery for an extra boost.
- Do not over-charge; this action will significantly shorten battery life.
- Always ensure that once the battery becomes discharged/flat that you re-charge for the recommended time. Failing to do so will significantly shorten battery life.
- Charging the product below 4°C (40°F) or above 40°C (104°F) will decrease the battery life significantly.
- V.R.L.A. batteries are heavy and contain lead & acid. They are dangerous if improperly handled.
- Only use the charger supplied with the product. The use of other chargers may cause damage to the battery and/or cause explosion.
- Battery chargers used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they must not be used until the damage has been repaired.
- Only use the battery supplied with this product. The use of other batteries may cause damage to the motor, charger and subsequent wiring, which could lead to fire and/or explosion.
- Exhausted batteries are to be removed from the toy.
- Always ensure that you connect the battery with the correct polarity.
- Never short-circuit the terminals of the battery, or any subsequent wiring.
- Never bypass or bridge a broken/blown fuse or circuit breaker and always replace with the same type/value and model.
- Do not replace the battery with any other battery apart from one purchased through the customer helpline 1800 224 094.



Safety Information

Assembly & User Instructions - Please keep for future reference

- Never use the bumper deflated.
- Never use the bumper without its base unit.
- Do not use a high pressure pump or over inflate.
- Not to be used as buoyancy aid or in or near, water/swimming pools.
- Do not use near any hot air heaters or open fires, keep away from sources of heat.

Moving the Bumpacar

- Care should be taken when moving the bumpacar. Do not lift using the inflatable.
- Use the steering wheel and arm rests to lift the bumpacar.
- Do not attempt to push the bumpacar at any time, it is designed to only move under its own power.
- Do not attempt to move or lift the bumpacar with a child inside.

Please remember that if you are using the bumpacar that air can expand during temperature changes. for example if you inflate it in a very cold air conditioned environment then use it outside on a very hot summers day the air will expand and may cause the bumper to burst.

Please check periodically that the inflatable has not become over inflated. If you suspect it is becoming over inflated you may need to release some pressure from the valve.

Parts

Please check you have all the parts and fittings listed below (Not to Scale)



 
Base



Drive & Steering Column



Steering Wheel

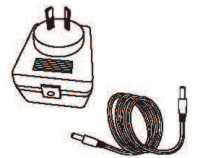

Charger



Flag Pole



Flag Pole Fitting



Flag Retainer



Flag 0489MIN



Flag 0472MIC

Inflatable Bumper Box



1 x Black Inflatable Bumper

 
4x Adhesive Velcro Strips



Decals 0489MIN



Decals 0472MIC

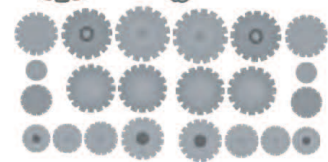

Assembly Instructions

Step 1

Turn the body upside down.

Pull the steering column retainer clip out as shown.



Step 2

Place the steering column into the centre of the ring.

Aligning it with the hole in the body.



Step 3

Once the steering column is in place push the steering column retaining clip back into place.

Turn the body right side up and check the steering column is secure.



Step 4

 
Install the batteries for sounds into the steering wheel.

Unscrew the battery cover.

Insert 2 X AA batteries (not supplied).

Please ensure that the polarity is correct.

Replace the battery cover.

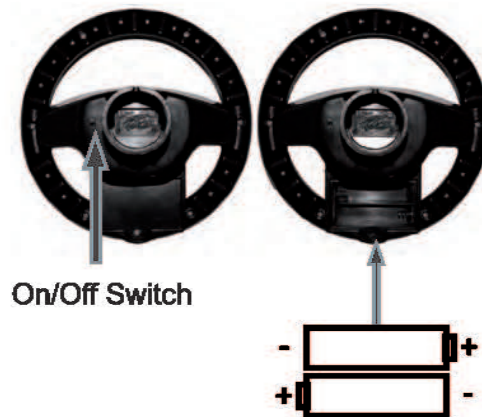

- Please refer to page 2 "Batteries for sounds" for import safety information.

Step 5

Place the steering wheel onto the steering column.

Aligning it as highlighted in the picture.

Push down gently until it clicks into place.



Step 6

Place the 4 adhesive velcro strips.

Each of the velcro strips must be fitted to the bottom edge as shown.

 
Press them down firmly to secure.



Step 7

inflate the bumper using the air valve.

Align the bumper as show in picture, with the safety valve at the rear.

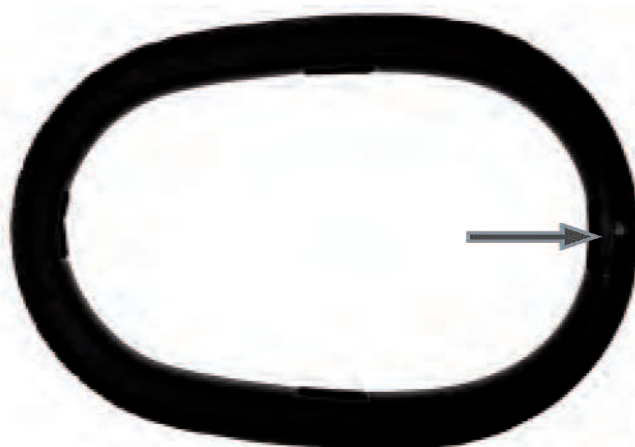

Carefully place the bumper onto the car aligning it up with Velcro strips.



Step 9

Please check that you have placed the bumper high enough to ensure that the bumper is not in contact with the floor when the car is operated.

Re-position if necessary.



Step 10 (0489MIN)

Insert the flag pole into the Minnie flag and then slide the retainer up the pole, to hold it in place.



 
Step 10 (0472MIC)

Insert the flag pole into the Mickey flag and then slide the retainer up the pole, to hold it in place.



Step 11

Insert the flag pole fitting into the bottom of the flag pole and inset into the rear of the car, as shown.

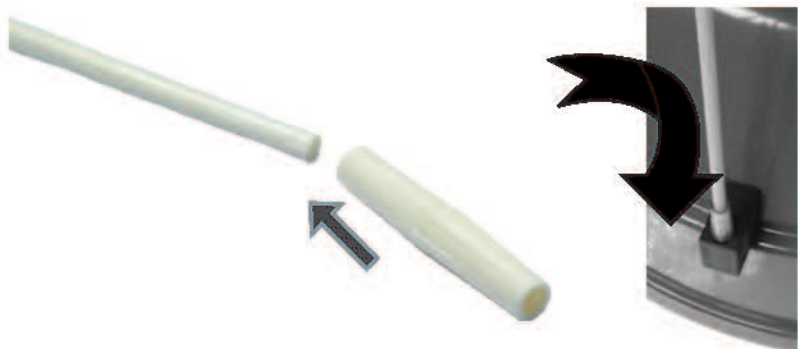


Step 12 (0489MIN)

Peel off each decal separately from the decals sheet and apply carefully.

Ensure that you align the decals as required before finally pressing them down firmly and smoothing out any bumps.

 Below is a guide to help you place the decals.

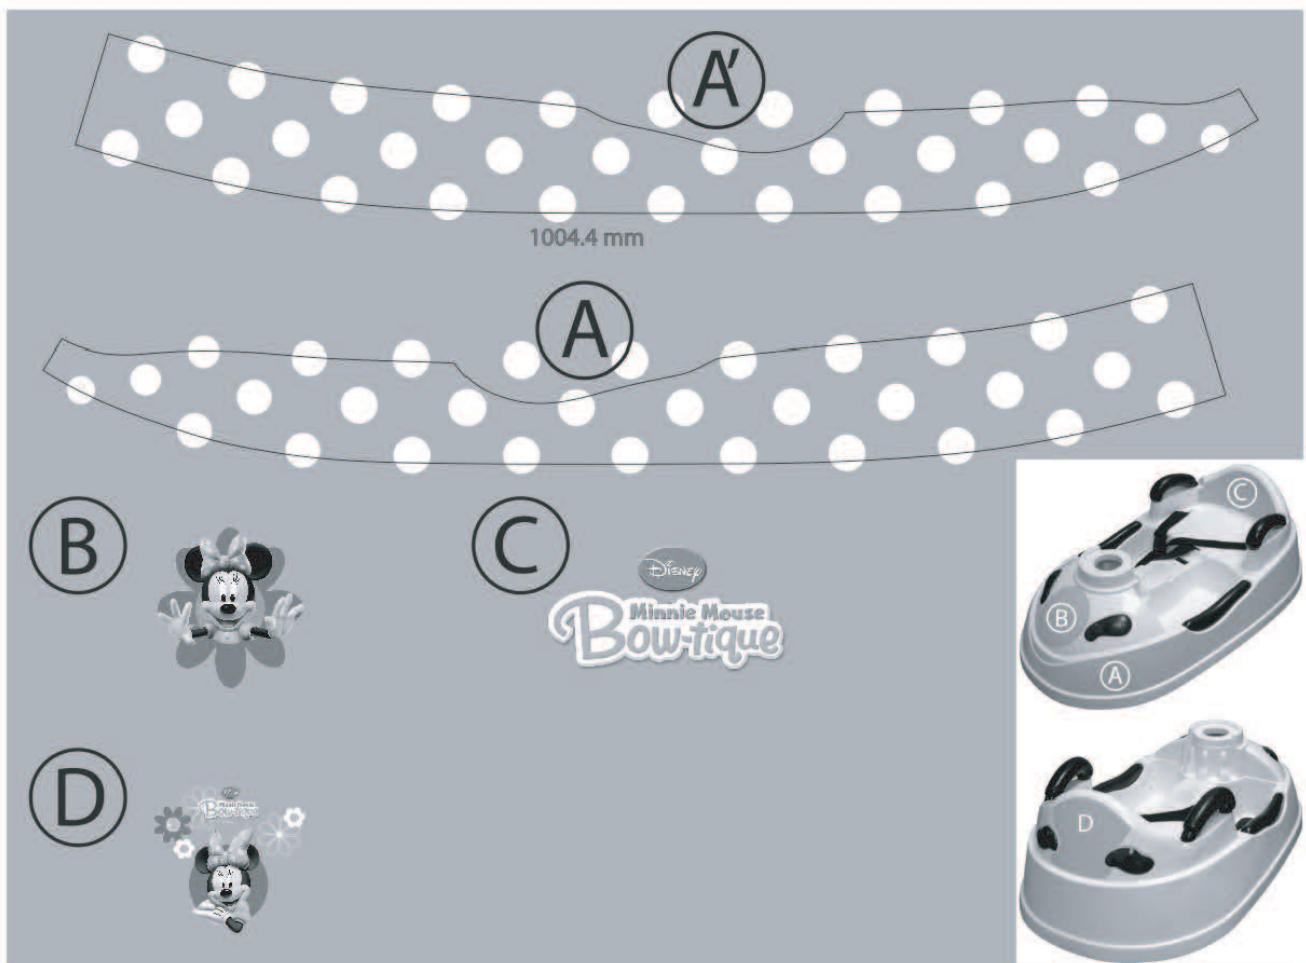

Important!

Please read the sections

'Important Safety Information' and 'Operating instructions'

Finally remember to check tightness of all components.

Remember to dispose of all packaging material responsibly before giving this product to your child.

 
You will need to charge the battery for the first use, please refer to the charging the battery section on page 12.

Step 12 (0472MIC)

Peel off each decal separately from the decals sheet and apply carefully.

Ensure that you align the decals as required before finally pressing them down firmly and smoothing out any bumps.

Below is a guide to help you place the decals.

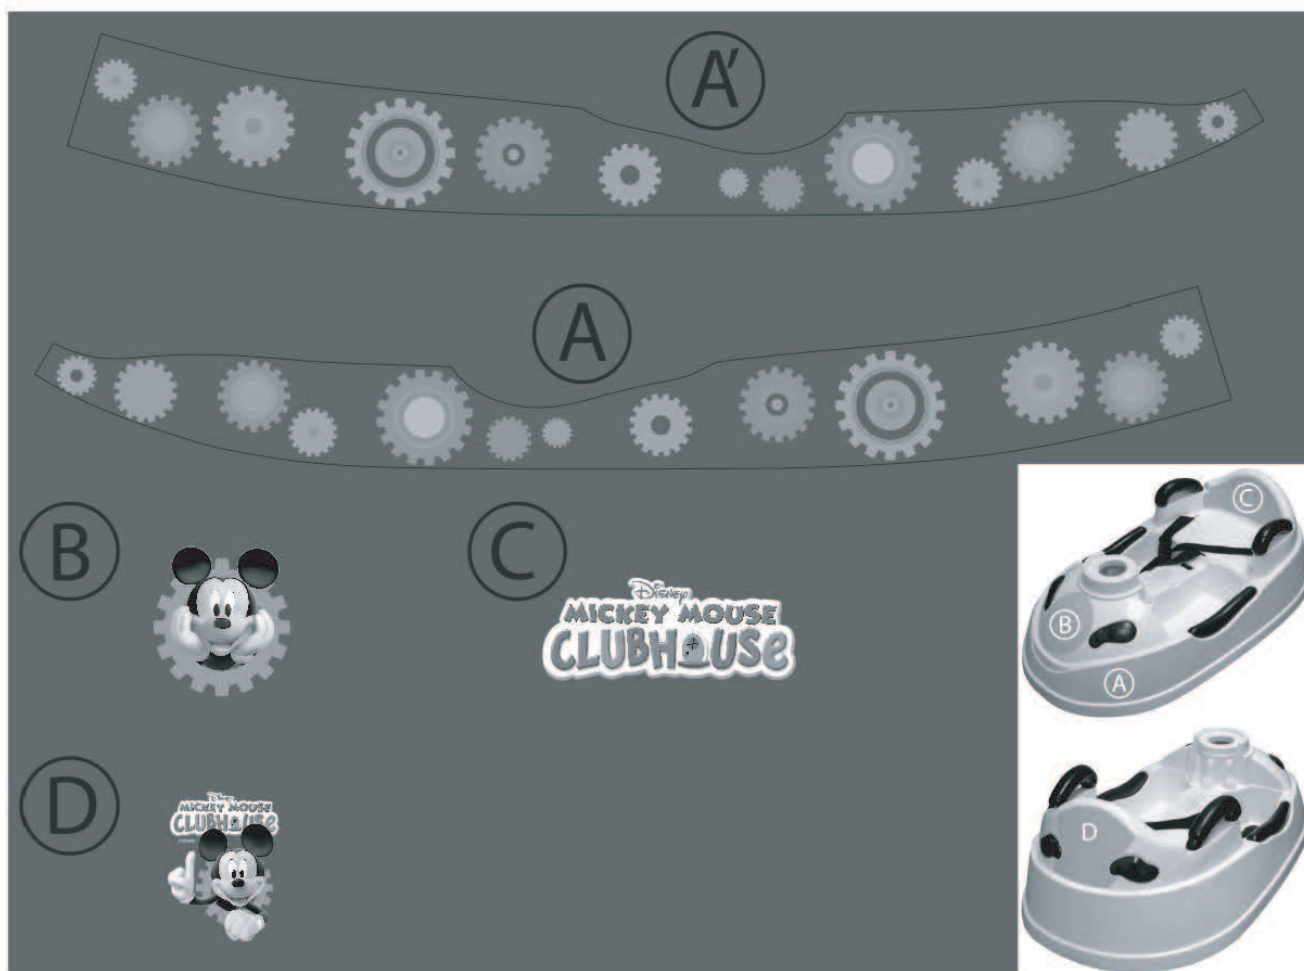

Important!

Please read the sections

'Important Safety Information' and 'Operating instructions'

 
Finally remember to check tightness of all components.

Remember to dispose of all packaging material responsibly before giving this product to your child.

You will need to charge the battery for the first use, please refer to the charging the battery section on page 12.

User Instructions

Using

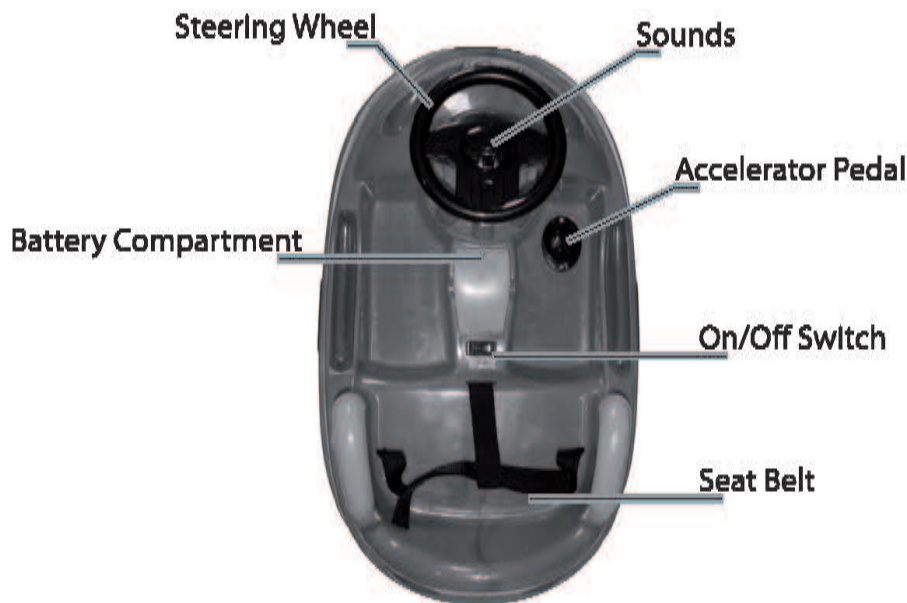

Moving & Stopping

To operate the car, first set the power switch to the "on" position.

This toy does not have a brake.

The motor will stop once the foot is off the accelerator pedal.

By depressing the pedal you will engage the motor and move the car in any direction with steering wheel.

Seat Belt

The seat belt must be adjusted manually. It is important that you adjust the belt for a snug fit over the child's hips, without any slack.

Steering

This car features 360 degree steering which means that you choose the direction of travel by moving the steering wheel.

Sounds

There are 4 buttons on the steering wheel; by pressing these buttons you will activate different random sound effects.

After Use

When you have finished using the product set the power switch to the off position.

Charging the 6v battery

Step 1

Remove the screw from the battery compartment cover.

Lift the battery compartment cover off.



Step 2

Place the charger in a mains outlet wall socket with the switch turned off.

Place the DC charge socket into connector as shown.

Switch on the mains outlet wall socket to start to charge the car, leave on charge for a maximum time of 8-10 hours.

Once the cycle is complete switch of the mains outlet wall socket first, before removing the DC charging socket.



Step 3

Once you have finished charging the battery, re-connect the connections from the battery to the base.

Please ensure that the wires are placed neatly back into the recess to avoid damage when replacing the battery cover.



Removing/replacing the 6v battery

Before you start

To replace the battery, Reverse the procedure

Ensure that when you replace the battery you don't trap or snag the main wire leading from the body.

Step 1

Remove the screw from the battery compartment cover.

Lift the battery compartment cover off.



Step 2

Unscrew the battery retaining bar



Step 3

Disconnect the RED (+) wire coming out of the battery cover.



Step 4

Remove the battery cover.



Step 5

Disconnect the BLACK (-) wire from the battery.



Step 6

Remove the battery.

Table/Trouble Shooting

Problem	Cause	Solution
Suddenly stopped moving	The thermal overload protection circuit breaker may have tripped	Turn off the power switch and leave it switched off for at least 5 minutes
Will not move	The thermal overload protection circuit breaker may have tripped	Disconnect the battery leave for 5 minutes, and then reconnect the battery.
Will not move	Battery not charged	Make sure the battery is fully charged; please refer to the battery charging section
Will not move	Wiring / Motor not working or damaged	Battery, wiring, and/or motor may be faulty please contact manufacturer
Moves Slowly	Battery not charged	Make sure the battery is fully charged; please refer to the battery charging section.
Moves Slowly	Motor not working correctly or damaged	Battery or motor may be faulty please contact manufacturer
Battery not Charging	Charger not plugged in correctly	Make sure the charger is plugged in and mains socket switched on
Battery not Charging	Connections may be loose	Examine the wiring, plugs, connections, battery terminals and make sure everything is connected properly.
Battery not Charging	Wiring damaged or battery requires replacing	Charger and/or wiring is faulty please contact manufacturer

Technical Specifications

Model	Bumpacar Ride On Toy
Recommended Ages	3 - 6 Years
Rider Weight Limit	30kg
Power	Rechargeable battery
Battery Type	6v Valve regulated lead acid battery (VRLA)
Battery Output	DC 6V 4.5Ah
Battery Capability	Approx 1 hour run time
Battery Charge Time	Max 8 - 10 hours
Battery Life	Max 300 charges
Charger Requirement	240V 50Hz
Charger Output	6v DC 500mA (under load)
Maximum Speed	2.5 - 3 km/hr

Care and Maintenance

General

If the product is being stored for long periods of time ensure that the battery is fully charged prior to storage, this will help prolong the life of the battery.

The product can be cleaned with a water-dampened cloth; do not use abrasive cleaners or creams or any alcohol-based cleaners

Store under cover out of direct sunlight and away from sources of heat

Do not leave the product outside in heavy rain or adverse weather conditions

Only charge the battery for a maximum time of 8 - 10 hours.

Please note the charger supplied is a simple charger which means it will not cut-out when the car is fully charged, you will have to take note of time passed in order to complete the charge cycle.

Inspect regularly for:

Periodically inspect the base unit, including wheels, for wear and damage or loose parts. If any evidence of wear or damage do not use, contact the helpline 1800 224 094 for replacement parts or advice.

Battery chargers used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they must not be used until the damage has been repaired.

Deflating the Bumper

If you need to deflate the bumper for storage. Squeeze the valve to allow the air to be expelled, rolling the bumper will help the air escape.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Where a failure does not amount to a major failure, we are entitled to choose between providing you with a repair, replacement or refund. To obtain compensation, you would need to provide documentary evidence of the loss or damage suffered, and documentary evidence that such loss or damage was a reasonably foreseeable consequence of a failure by us to comply with a consumer guarantee under the Australian Consumer Law. Such evidence may include photographs, statutory declarations, receipts or reports (e.g. from your doctor), depending on the loss or damage.

In addition to all rights and remedies to which you may be entitled under the Competition and Consumer Act 2010 (Commonwealth) and any other relevant legislation, the manufacturer warrants this product to be free from defects in materials or workmanship for a period as stated on the packaging from the date of purchase.

In order to claim under this warranty, you will need to bring the product to the store of purchase, along with proof of purchase (typically this will be a receipt). Any cost incurred by you in bringing the product to the service desk will be borne by you. We will then, at our option, either repair or replace the product, or refund your money and take back the product.

Our liability under this manufacturer's warranty is subject to us being satisfied that a defect was caused by defective workmanship or materials, and was not caused by or substantially contributed to by other factors, or circumstances beyond our control, including (but not limited to) defective installation, maintenance or repair, alteration or modification of the product in any manner not recommended by the manufacturer or any neglect, misuse or excessive use.

The benefits conferred by this manufacturer's warranty are in addition to all rights and remedies conveyed by the Competition and Consumer Act 2010 (Commonwealth), and any other statutory rights to which you may already be entitled, and this warranty does not exclude, restrict or modify any such rights or remedies that are implied by law.

HUNTER PRODUCTS

Level 2, 424 Warrigal Road Moorabbin 3189

Ph: 1800 224 094

Email: enquiries@hunterproducts.com.au

Disposal Of Battery

Disposal Of Battery



- Your sealed lead-acid battery must be recycled or disposed of in an environmentally sound manner.
- Do not dispose of your lead-acid battery in a fire. The battery may explode or leak.
- Do not dispose of a lead-acid battery in your regular, household trash. The incineration, land filling or mixing of sealed lead-acid batteries with household trash is prohibited by law.
- Return an exhausted battery to your local approved lead-acid battery recycle, such as a local seller of automotive batteries.
- Contact your local waste management officials for other information regarding the environmentally sound recycling and disposal of lead-acid batteries.

PLEASE NOTE:
IN CASE OF PRODUCT FAULT
DO NOT RETURN THIS PRODUCT
TO STORE. PLEASE CONTACT
Hunter Products Customer Service
TOLL FREE NUMBER:
1800 224 094

FOR CUSTOMER SERVICE OR PRODUCT ENQUIRIES
PLEASE CONTACT Hunter Products Customer Service
TOLL FREE NUMBER: 1800 224 094
MADE IN CHINA

**PLEASE NOTE: IN CASE OF PRODUCT FAULT DO NOT RETURN THIS PRODUCT TO STORE.
PLEASE CONTACT HUNTER PRODUCTS CUSTOMER SERVICE TOLL FREE NUMBER: 1800 224 094**