


CHILDREN ELECTRIC CAR

Installation and Operation

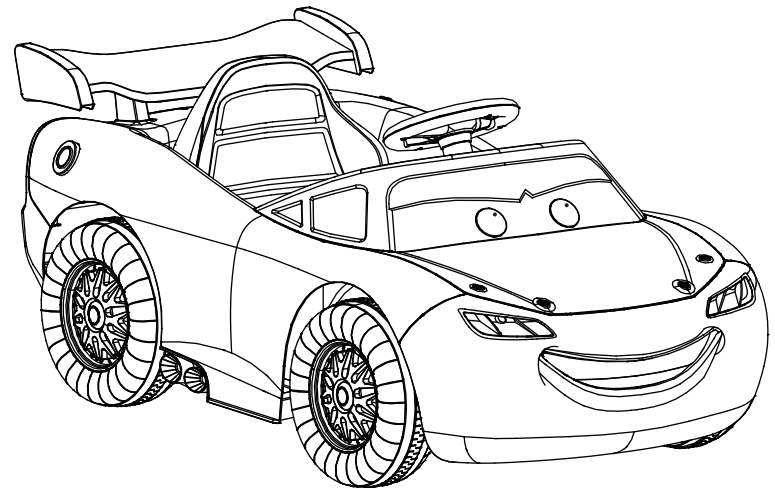

The car should be assembled by adults. The picture is for reference only. Please adhere to the original products in case of any mistake!

**FOR ANY PRODUCT ENQUIRIES OR ISSUES PLEASE CONTACT HUNTER PRODUCTS
AT WWW.ELECTRICRIDEON.COM.AU OR TOLL FREE HELP LINE 1800 224 094.**

The pictures in this instruction sheet are aimed to show the constructor and operating method of the car, if there is any discrepancy between the picture and the car, please take the car as standard.

Please read the instructions carefully before using, it will teach you the right way of operating and installation, in case that the incorrect operating may cause damage of the car or even hurt your child. Please safekeep the specification sheet .

Specification

Description	Specification
Storage battery	6V 7Ah
Electric motor	6V 25W
Suit age	3+ years
Max loading weight	30kg
Size	1150×635×520mm
Speed	3.2 km/h - 3.7km/h
Utility time	8-12h(charge),1-2h(use)
Charger	AC100-240V 50Hz(input),DC8V 800mA


Parts description

CHILDREN ELECTRIC CAR

Installation and Operation




8

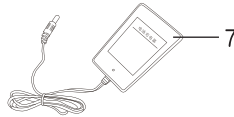

7


© 2014 HUNTER PRODUCTS PTY LTD. ALL RIGHTS RESERVED. THE INFORMATION CONTAINED HEREIN IS THE PROPERTY OF HUNTER PRODUCTS PTY LTD. AND IS TO BE USED ONLY FOR THE PURPOSES SPECIFIED HEREIN.

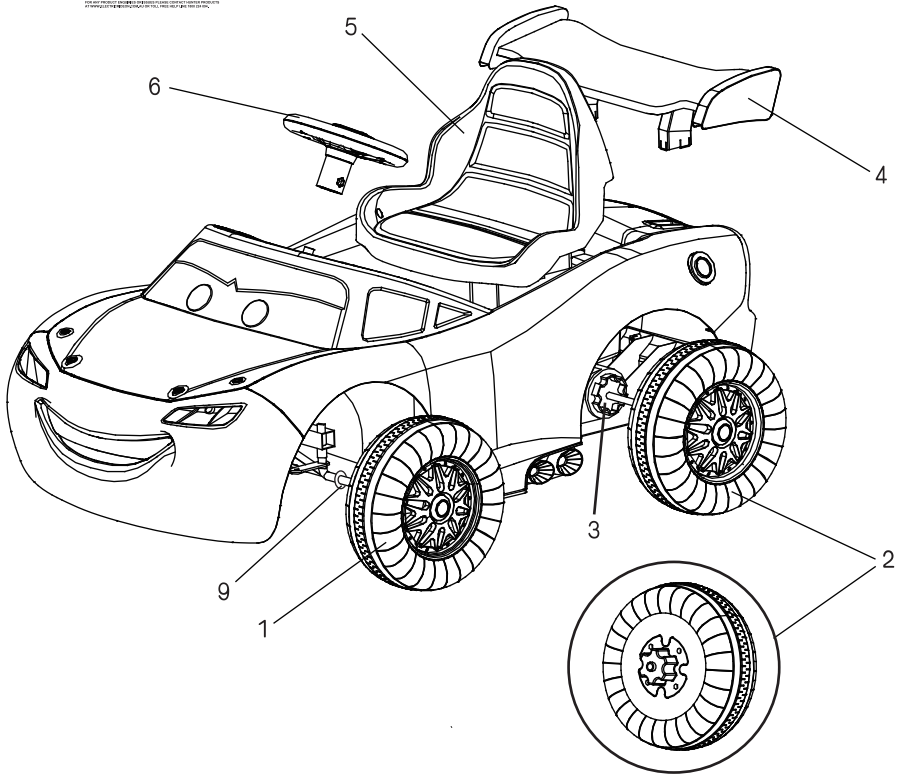

*There may be some difference between different production configurations!


sequenc e number	Parts description	Quantity	sequence number	Parts description	Quantity	sequence number	Parts description	Quantity
1	Front wheel	2	5	Seat	1	8	Specificati on sheet	1
2	Driving wheel	2	6	Steering wheel	1	9	shim	2
3	Driving gearbox	2	7	Charger	1			
4	Rear tail fins	1						

Installation steps

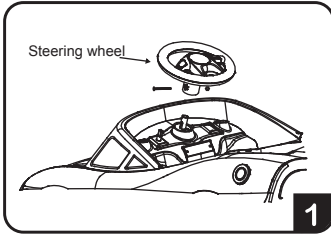


1. Install the steering wheel:

- (1) Connect the wire for steering and panel board;
- (2) Fix the steering rod.(see picture 1)

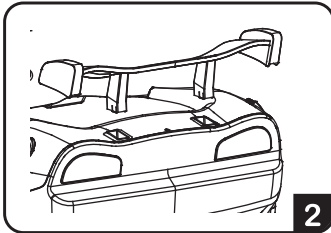


2. Install the rear tail fins:

Put the rear tail fins into the slot.(see picture 2)

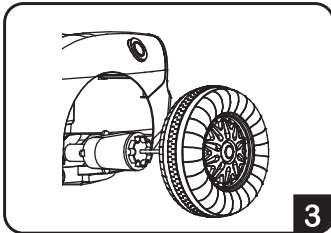


3. Install the back wheel:

- (1) Put the gear box into the axle and motor hole.(see picture 3)
- (2) Fix the back wheel.

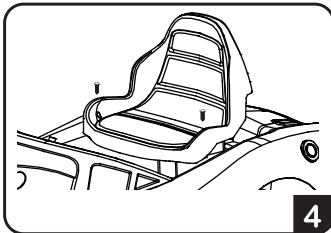

4. Install the seat:


- (1) Connect the motor drive wire and the control wire under the seat.
- (2) Insert the clip of the both side of seat into recess hole.
- (3) Use screw to lock the seat.(see picture 4)

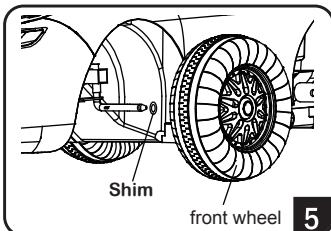


5. Install the front wheel:

- (1) Put shim on the front wheel axle.
- (2) Fix the front wheel. (see picture 5)


Directions for use

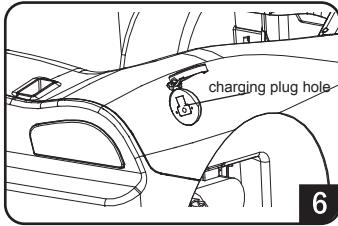

1. Battery charging: when the power is low, please charge in time. The charging plug hole is in down right the panel board (upper the pedal)

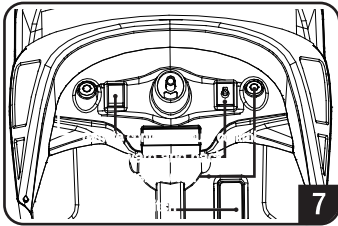

2. Control by hand: sit safely and turn on the power. When it is in the position of manual control, press the pedal and you can go forward or back, while using the “go forward and back” gear shift lever. (see picture 7)

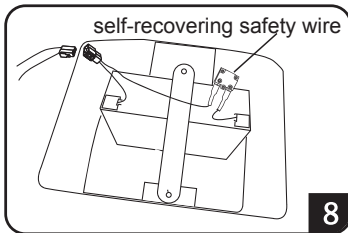

3. The safety wire: the car adopts self-recovering safety wire, when the electricity is over 20A, it will cut the power, after 5-10 seconds, and it can recover by itself. (see picture 8)

Faults and solutions

Type of fault	Analysis of causes	Solutions
Can not move	<ol style="list-style-type: none"> 1.Voltage is below normal level 2. safety wire protect 3.the screw on the wheels has fell off 4.battery connector has fell off 5.battery is damaged 6.Electrical device is damaged 7. Motor is damaged 	Charge the battery Wait for a while Tighten the screw again Insert again Change new battery Bring it to repair maintenance points Bring it to repair in maintenance points
The battery can not be charged	<ol style="list-style-type: none"> 1.battery connector has fell off 2.battery charger is power off 3.battery charger is damaged 	Insert again Plug into again Plug into again
Distance per charge is short	<ol style="list-style-type: none"> 1.Battery is not full 2.Battery is old 	Charge the battery again Change the battery
Some noise and heat when charge the battery	<ol style="list-style-type: none"> 1.Chemical reaction 	Normal
Low speed	<ol style="list-style-type: none"> 1.Battery is old 2.Battery is out of power 3.Over load 4.Undulate pavement 	Change the battery Change the battery again Lighten the weight less than 35 kg Drive on smooth path
Gear box with high noise	<ol style="list-style-type: none"> 1.Gear is broken 	Bring it to repair in maintenance Coirts
The car shakes during driving	<ol style="list-style-type: none"> 1.bad connection of the motor connector wires 	Connect well
The car moves with no sound	<ol style="list-style-type: none"> 1.bad connection of the steering control 	Connect well
The car can not stop	<ol style="list-style-type: none"> 1.the electric device is broken 	Bring it to repair in maintenance points

Warning

Please keep and read the instructions carefully before using. If not following the instructions, there may cause the risk of hurt to the child and the car. For your child's safety, please pay attention to the following warnings:

- Installation should be done by adults; Keep child away from the moving parts.
- Not suitable for using by child less than 36 months because of small parts inside.
- Make sure of using safe belt correctly during driving; keep away from fire!
- The children can not drive alone without adults.
- Don't let the children stand on the step board (or in the car).
- After charging the storage battery by the adults, the children can use the car.
- Put the plastic bags far away from the children in case of suffocation.
- Forbid using any spare parts not produced by the manufacture.
- Battery should be put in with right polarity.
- Do not take the charger as a toy.
- Do not load more than 30kg.
- Suit age for the car is 3+ years.
- Non storage battery can not be charged; take the exhausted battery out.
- Do not allow short circuit on power terminal.
- The car is not allowed to be connected to power -supply more than suggested.

Kind reminder for charging

- Make sure the battery has been charged over 18 hours before the first use.
- Connect the charge DC plug, and then connect the charge into the power supply. Do not make any operation during charging.
- After 1 hour using, you should charge in time. It takes 8-12 hours to charge normally.
- Do not charge over 20 hours.
- It is normal to have some heat for charger and battery when it is charging (lower than 60°C).
- Charging in wet may cause short circuit.
- Make sure use the self-contained charger and battery to avoid any damage of circuitry. Charge the battery once a month at least when the car is not driven for long time.

Kind reminder

- Make sure the battery has been charged over 18 hours before first use, otherwise it will be damaged forever.
- Do not drive the car on the slipped street, road, slope or other dangerous places.
- Do not drive the car on smooth surface, such as marble and floor tile.
- Do not transfer the switch “go forward” to “go back” during the advance. Do not allow the children stand on the seat. Do not make any changes of the circuitry or other electriferous device.
- Do not put or immerse water or any other liquid on the car, to avoid damage of circuitry.
- When the car meets some obstacle, it will stop. Please drive after getting across the obstacle.
- Do not drive the car indoor, in case of cracking up the furniture or tumbling down the children.
- When the power is low, the car can just go forward, but not left or right. When it can't go farther or shake etc, please change the battery at once.
- The car can carry one child only with maximum of 30KG.
- Please turn off the power when not driving. If the car is not driven for a long time, please cut off the battery connector.



WARNINGS:

Forbid the child opening or changing batteries by himself.

Maintenance

- In order to keep your baby away from accidental injury, please check and maintain the car regularly.
- Make sure all parts are complete before installation; if there is any problem, please contact us as soon.
- Please check periodically whether the screws are loose or the accessory parts are damaged.
- Make sure every part is complete before installation and use.
- Please clean the car regularly; do not damage the electrical device.
- Please install and disassemble the car according to the specification, to avoid causing unnecessary damage.
- Please check the car and the charger to make sure there is no damage of the electrical wire, plug and other parts regularly. If find any damage, stop use until repair.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Where a failure does not amount to a major failure, we are entitled to choose between providing you with a repair, replacement or refund. To obtain compensation, you would need to provide documentary evidence of the loss or damage suffered, and documentary evidence that such loss or damage was a reasonably foreseeable consequence of a failure by us to comply with a consumer guarantee under the Australian Consumer Law. Such evidence may include photographs, statutory declarations, receipts or reports (e.g. from your doctor), depending on the loss or damage.

In addition to all rights and remedies to which you may be entitled under the Competition and Consumer Act 2010 (Commonwealth) and any other relevant legislation, the manufacturer warrants this product to be free from defects in materials or workmanship for a period as stated on the packaging from the date of purchase.

In order to claim under this warranty, you will need to bring the product to the store of purchase, along with proof of purchase (typically this will be a receipt). Any cost incurred by you in bringing the product to the service desk will be borne by you. We will then, at our option, either repair or replace the product, or refund your money and take back the product.

Our liability under this manufacturer's warranty is subject to us being satisfied that a defect was caused by defective workmanship or materials, and was not caused by or substantially contributed to by other factors, or circumstances beyond our control, including (but not limited to) defective installation, maintenance or repair, alteration or modification of the product in any manner not recommended by the manufacturer or any neglect, misuse or excessive use.

The benefits conferred by this manufacturer's warranty are in addition to all rights and remedies conveyed by the Competition and Consumer Act 2010 (Commonwealth), and any other statutory rights to which you may already be entitled, and this warranty does not exclude, restrict or modify any such rights or remedies that are implied by law.

HUNTER PRODUCTS

Level 2, 424 Warrigal Road Moorabbin 3189

Ph: 1800 224 094

Email: enquiries@hunterproducts.com.au